

# Réseaux

## Introduction à la couche 2

### – Ethernet

- Luc Deneire
- EII-4 Réseaux

# Link layer and LANs: our goals

- understand principles behind link layer services:
  - error detection, correction (done, 1<sup>st</sup> lecture)
  - sharing a broadcast channel: multiple access
  - link layer addressing
  - local area networks: Ethernet, VLANs



# Link layer, LANs: roadmap

- introduction
  - error detection, correction
  - multiple access protocols
  - LANs
    - addressing, ARP
    - Ethernet
    - switches
    - VLANs
  - link virtualization: MPLS
  - data center networking
- a day in the life of a web request




# Link layer: introduction

terminology:

- hosts and routers: nodes
- communication channels that connect adjacent nodes along communication path: links
  - wired
  - wireless
  - LANs
- layer-2 packet: *frame*, encapsulates datagram

*link layer has responsibility of transferring datagram from one node to physically adjacent node over a link*

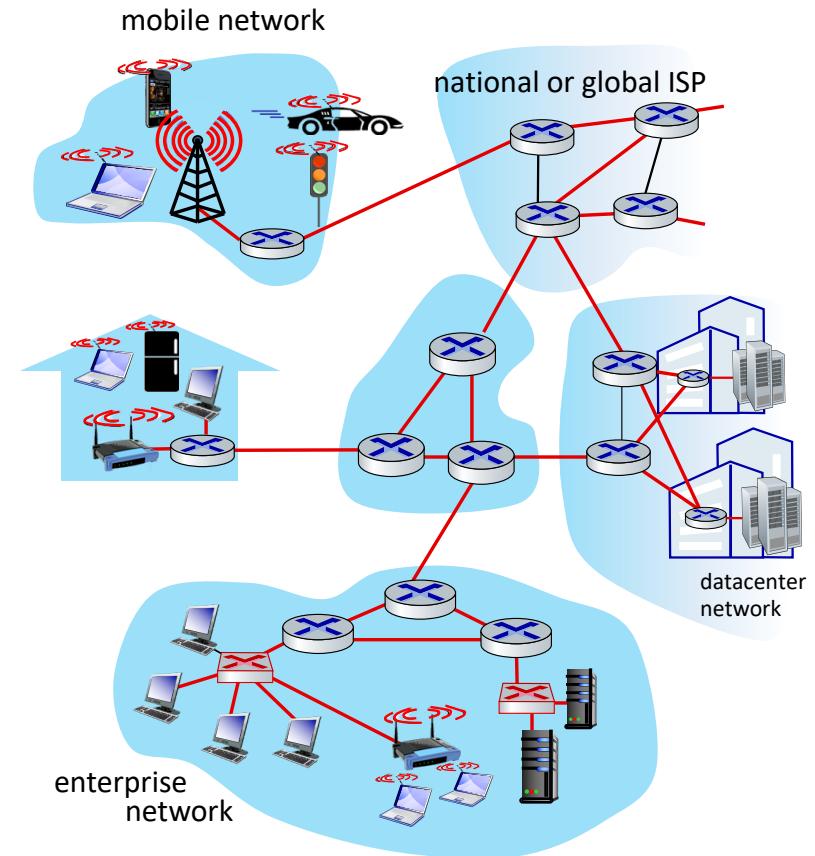

# Link layer: context


- datagram transferred by different link protocols over different links:
  - e.g., WiFi on first link, Ethernet on next link
- each link protocol provides different services
  - e.g., may or may not provide reliable data transfer over link

## transportation analogy:

- trip from Princeton to Lausanne
  - limo: Princeton to JFK
  - plane: JFK to Geneva
  - train: Geneva to Lausanne
- tourist = datagram
- transport segment = communication link
- transportation mode = link-layer protocol
- travel agent = routing algorithm


# Link layer: services

- **framing, link access:**
  - encapsulate datagram into frame, adding header, trailer
  - channel access if shared medium
  - “MAC” addresses in frame headers identify source, destination (different from IP address!)
- **reliable delivery between adjacent nodes**
  - we already know how to do this!
  - seldom used on low bit-error links
  - wireless links: high error rates
    - Q: why both link-level and end-end reliability?

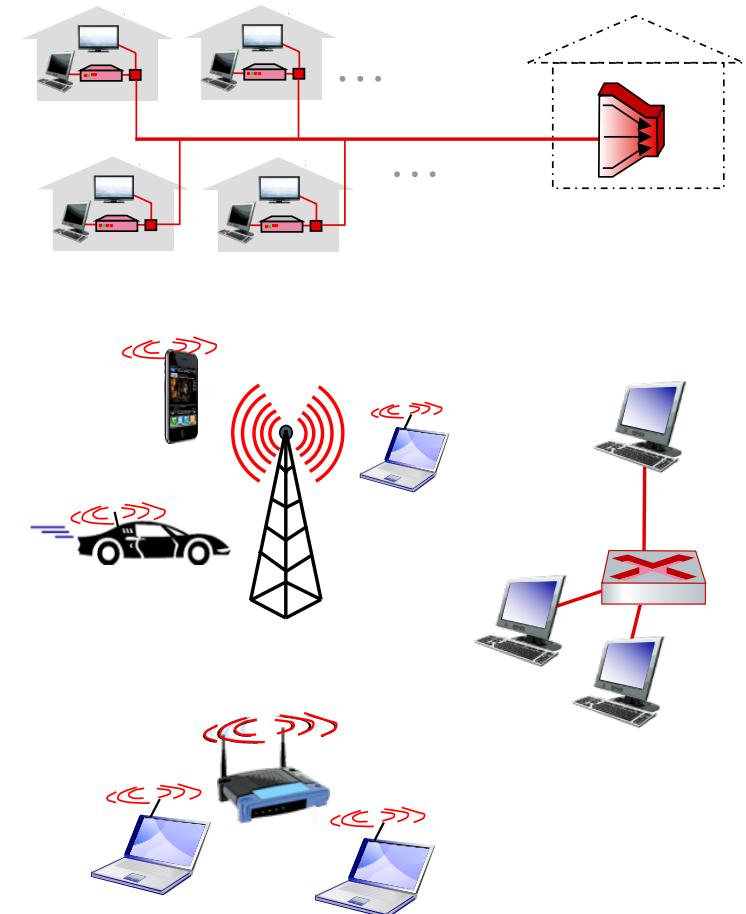


# Link layer: services (more)

- **flow control:**
  - pacing between adjacent sending and receiving nodes
- **error detection:**
  - errors caused by signal attenuation, noise.
  - receiver detects errors, signals retransmission, or drops frame
- **error correction:**
  - receiver identifies *and corrects* bit error(s) without retransmission
- **half-duplex and full-duplex:**
  - with half duplex, nodes at both ends of link can transmit, but not at same time

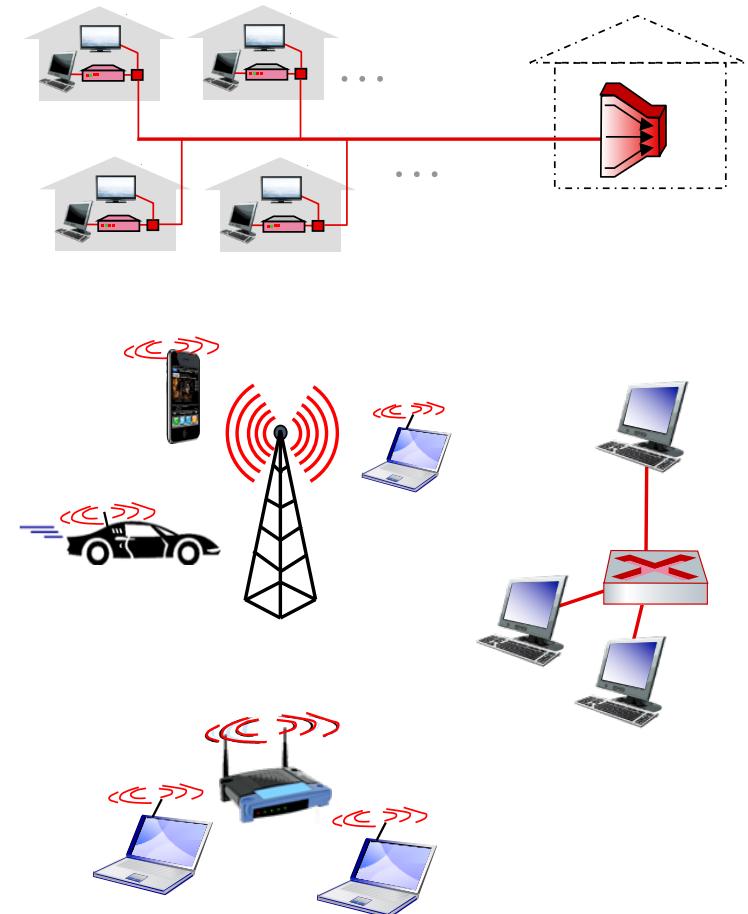


# Where is the link layer implemented?

- in each-and-every host
- link layer implemented in *network interface card* (NIC) or on a chip
  - Ethernet, WiFi card or chip
  - implements link, physical layer
- attaches into host's system buses
- combination of hardware, software, firmware

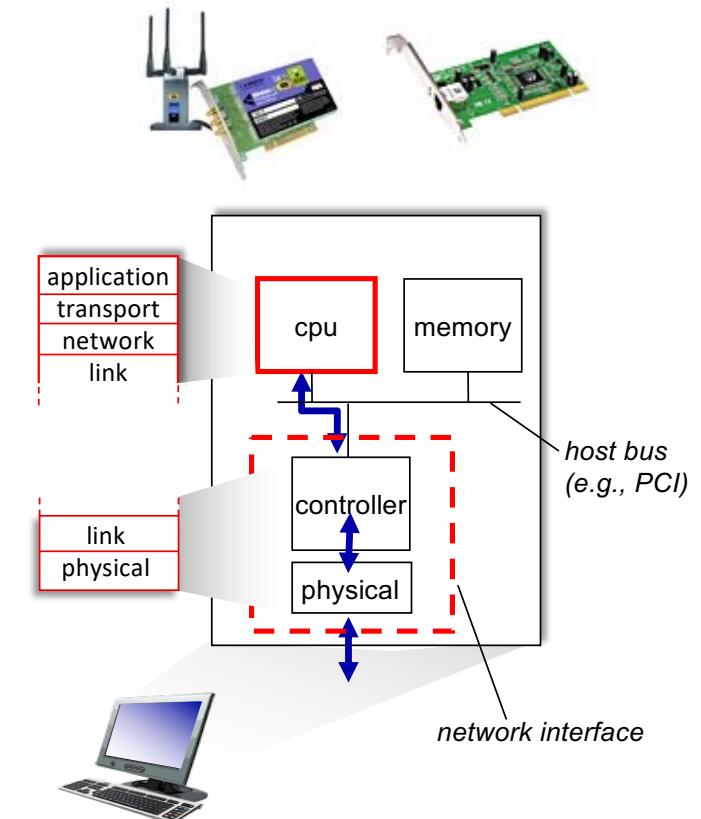

# Interfaces communicating

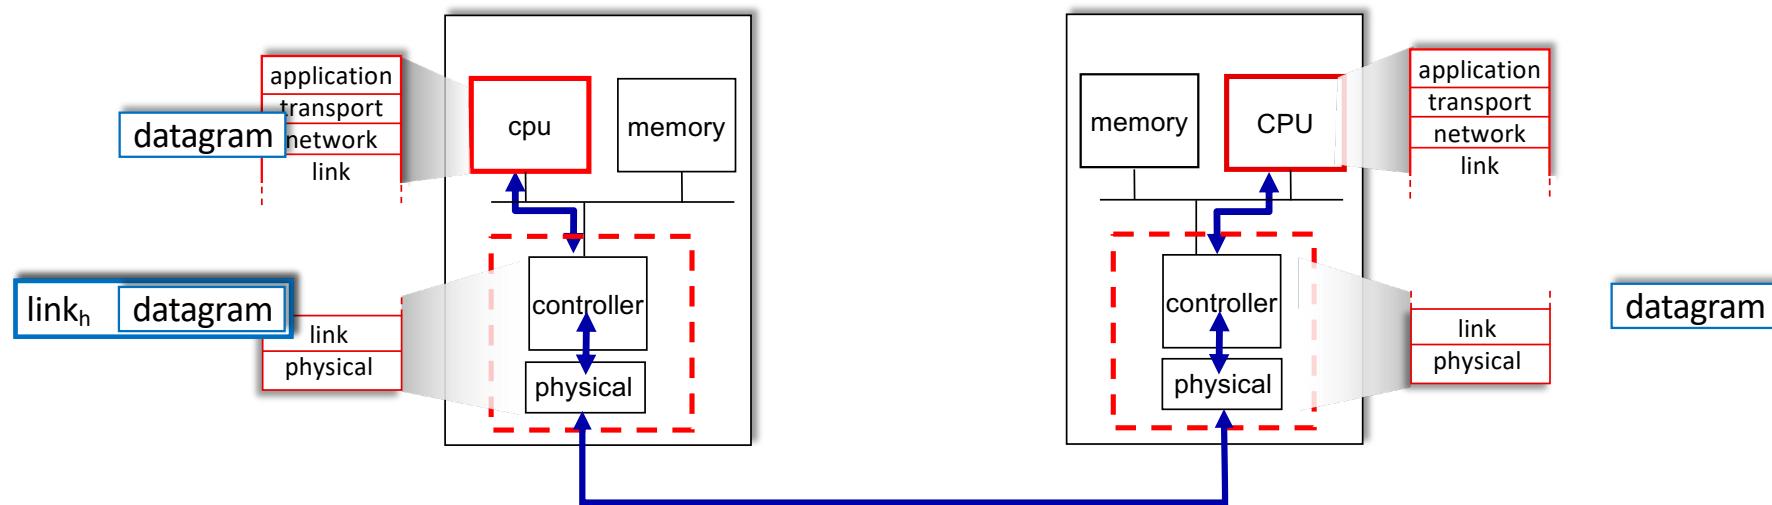

sending side:

- encapsulates datagram in frame
- adds error checking bits, reliable data transfer, flow control, etc.

receiving side:

- looks for errors, reliable data transfer, flow control, etc.
- extracts datagram, passes to upper layer at receiving side

# Link layer, LANs: roadmap

- introduction
- **error detection, correction**
- multiple access protocols
- LANs
  - addressing, ARP
  - Ethernet
  - switches
  - VLANs
- link virtualization: MPLS
- data center networking




- a day in the life of a web request

# Error detection

EDC: error detection and correction bits (e.g., redundancy)

D: data protected by error checking, may include header fields

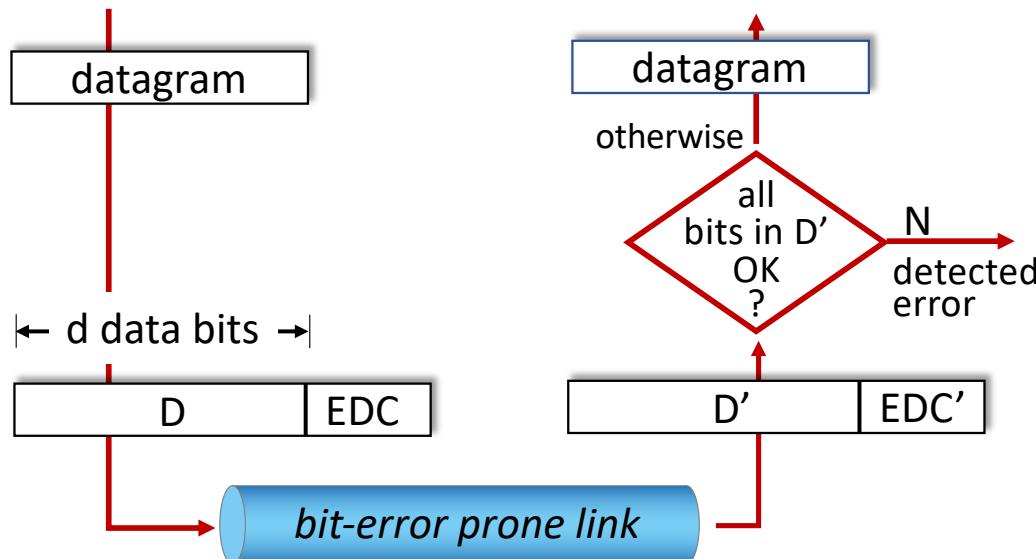

Error detection not 100% reliable!

- protocol may miss some errors, but rarely
- larger EDC field yields better detection and correction

# Link layer, LANs: roadmap

- introduction
- error detection, correction
- **multiple access protocols**
- LANs
  - addressing, ARP
  - Ethernet
  - switches
  - VLANs
- link virtualization: MPLS
- data center networking



- a day in the life of a web request

# Multiple access links, protocols

two types of “links”:

- point-to-point
  - point-to-point link between Ethernet switch, host
  - PPP for dial-up access
- broadcast (shared wire or medium)
  - old-fashioned Ethernet
  - upstream HFC in cable-based access network
  - 802.11 wireless LAN, 4G/4G satellite




shared wire (e.g., cabled Ethernet)



shared radio: 4G/5G



shared radio: WiFi

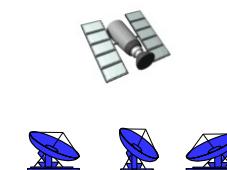

shared radio: satellite



humans at a cocktail party  
(shared air, acoustical)

# Multiple access protocols

- single shared broadcast channel
- two or more simultaneous transmissions by nodes: interference
  - *collision* if node receives two or more signals at the same time

## multiple access protocol

- distributed algorithm that determines how nodes share channel, i.e., determine when node can transmit
- communication about channel sharing must use channel itself!
  - no out-of-band channel for coordination

# An ideal multiple access protocol

*given:* multiple access channel (MAC) of rate  $R$  bps

*desiderata:*

1. when one node wants to transmit, it can send at rate  $R$ .
2. when  $M$  nodes want to transmit, each can send at average rate  $R/M$
3. fully decentralized:
  - no special node to coordinate transmissions
  - no synchronization of clocks, slots
4. simple

# MAC protocols: taxonomy


three broad classes:

- **channel partitioning**
  - divide channel into smaller “pieces” (time slots, frequency, code)
  - allocate piece to node for exclusive use
- *random access*
  - channel not divided, allow collisions
  - “recover” from collisions
- **“taking turns”**
  - nodes take turns, but nodes with more to send can take longer turns

# Channel partitioning MAC protocols: TDMA

## TDMA: time division multiple access


- access to channel in “rounds”
- each station gets fixed length slot (length = packet transmission time) in each round
- unused slots go idle
- example: 6-station LAN, 1,3,4 have packets to send, slots 2,5,6 idle

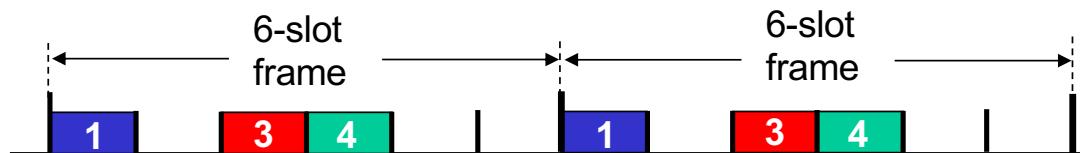

# Channel partitioning MAC protocols: FDMA

## FDMA: frequency division multiple access

- channel spectrum divided into frequency bands
- each station assigned fixed frequency band
- unused transmission time in frequency bands go idle
- example: 6-station LAN, 1,3,4 have packet to send, frequency bands 2,5,6 idle

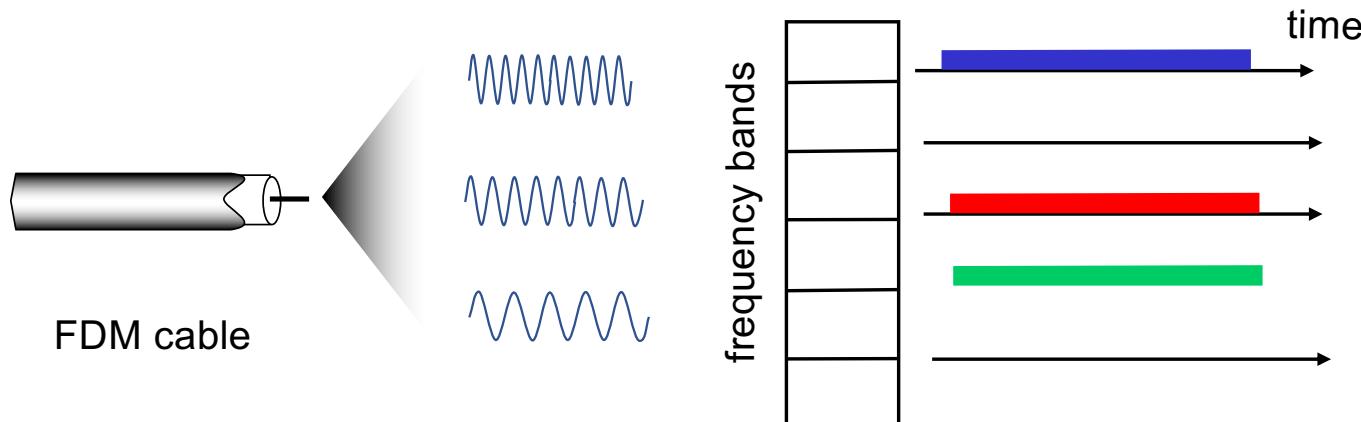

# Random access protocols

- when node has packet to send
  - transmit at full channel data rate  $R$ .
  - no *a priori* coordination among nodes
- two or more transmitting nodes: “collision”
- **random access MAC protocol specifies:**
  - how to detect collisions
  - how to recover from collisions (e.g., via delayed retransmissions)
- examples of random access MAC protocols:
  - ALOHA, slotted ALOHA
  - CSMA, CSMA/CD, CSMA/CA

# Slotted ALOHA

## assumptions:


- all frames same size
- time divided into equal size slots (time to transmit 1 frame)
- nodes start to transmit only slot beginning
- nodes are synchronized
- if 2 or more nodes transmit in slot, all nodes detect collision

## operation:

- when node obtains fresh frame, transmits in next slot
  - *if no collision*: node can send new frame in next slot
  - *if collision*: node retransmits frame in each subsequent slot with probability  $p$  until success

randomization – *why?*

# Slotted ALOHA

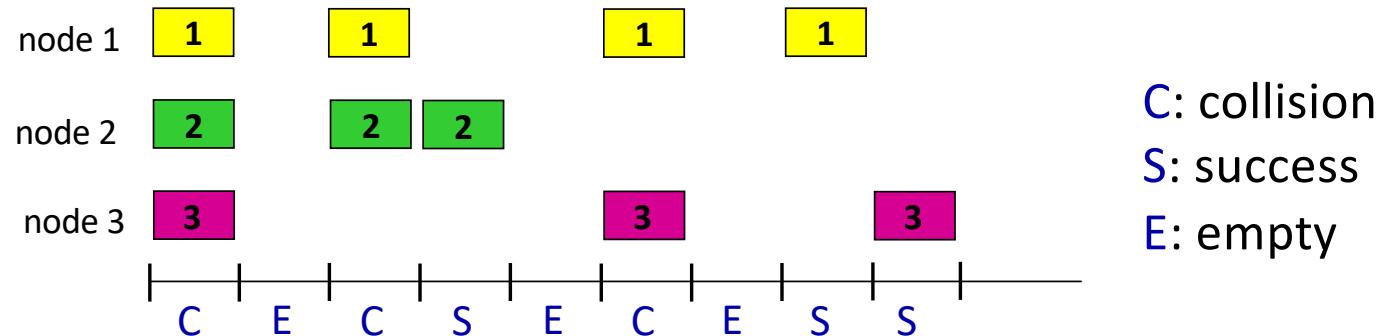

## Pros:

- single active node can continuously transmit at full rate of channel
- highly decentralized: only slots in nodes need to be in sync
- simple

## Cons:

- collisions, wasting slots
- idle slots
- nodes may be able to detect collision in less than time to transmit packet
- clock synchronization

# Slotted ALOHA: efficiency

**efficiency:** long-run fraction of successful slots (many nodes, all with many frames to send)


- *suppose:*  $N$  nodes with many frames to send, each transmits in slot with probability  $p$ 
  - prob that given node has success in a slot =  $p(1-p)^{N-1}$
  - prob that *any* node has a success =  $Np(1-p)^{N-1}$
  - max efficiency: find  $p^*$  that maximizes  $Np(1-p)^{N-1}$
  - for many nodes, take limit of  $Np^*(1-p^*)^{N-1}$  as  $N$  goes to infinity, gives:

$$\text{max efficiency} = 1/e = .37$$

- *at best:* channel used for useful transmissions 37% of time!

# Pure ALOHA

- unslotted Aloha: simpler, no synchronization
  - when frame first arrives: transmit immediately
- collision probability increases with no synchronization:
  - frame sent at  $t_0$  collides with other frames sent in  $[t_0-1, t_0+1]$

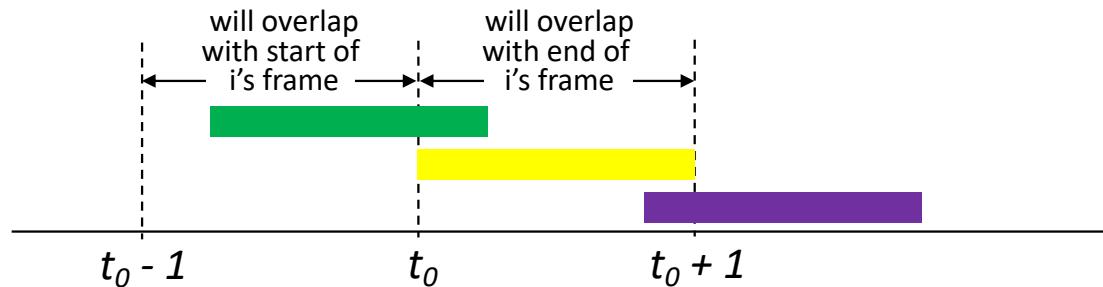

- pure Aloha efficiency: 18% !

# CSMA (carrier sense multiple access)

simple CSMA: listen before transmit:


- if channel sensed idle: transmit entire frame
- if channel sensed busy: defer transmission
- human analogy: don't interrupt others!

CSMA/CD: CSMA with *collision detection*

- collisions *detected* within short time
- colliding transmissions aborted, reducing channel wastage
- collision detection easy in wired, difficult with wireless
- human analogy: the polite conversationalist


# CSMA: collisions

- collisions *can* still occur with carrier sensing:
  - propagation delay means two nodes may not hear each other's just-started transmission
- **collision:** entire packet transmission time wasted
  - distance & propagation delay play role in determining collision probability

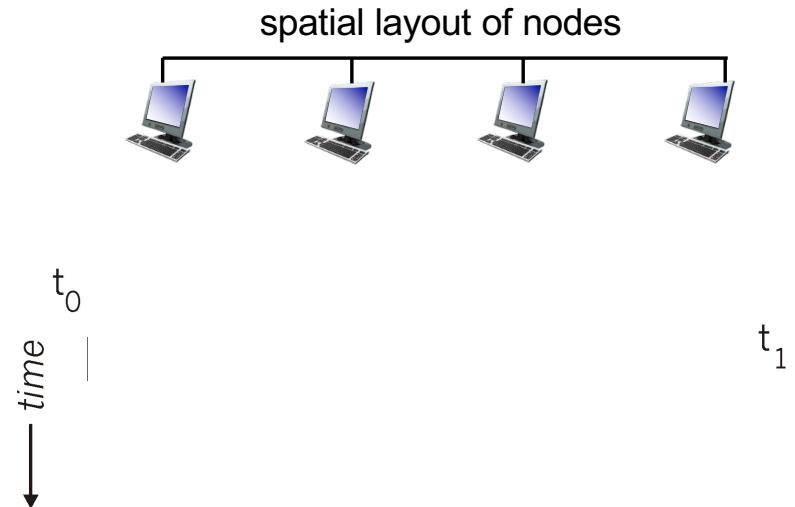

# CSMA/CD:

- CSMA/CS reduces the amount of time wasted in collisions
  - transmission aborted on collision detection

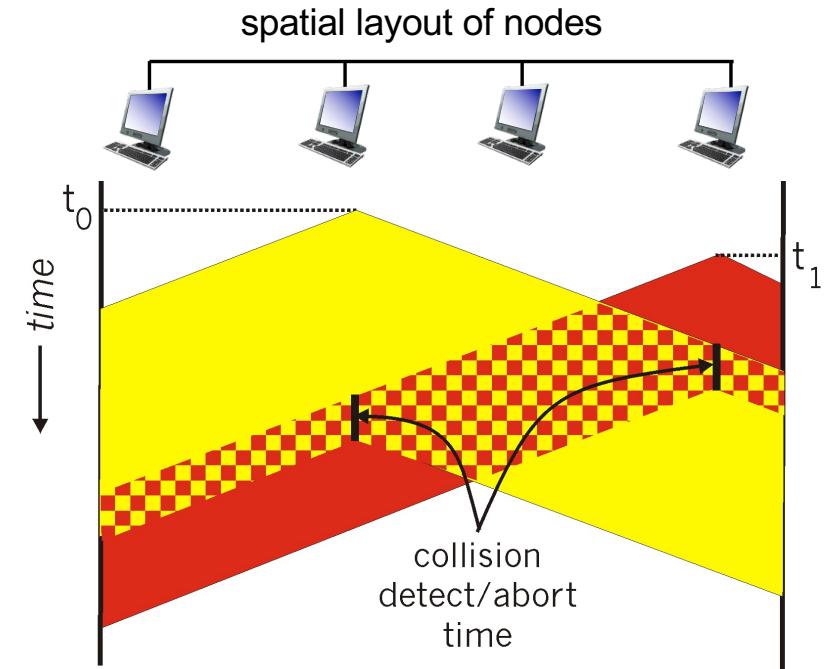

# Ethernet CSMA/CD algorithm

1. NIC receives datagram from network layer, creates frame
2. If NIC senses channel:
  - if **idle**: start frame transmission.
  - if **busy**: wait until channel idle, then transmit
3. If NIC transmits entire frame without collision, NIC is done with frame !
4. If NIC detects another transmission while sending: abort, send jam signal
5. After aborting, NIC enters ***binary (exponential) backoff***:
  - after  $m$ th collision, NIC chooses  $K$  at random from  $\{0,1,2, \dots, 2^m-1\}$ . NIC waits  $K \cdot 512$  bit times, returns to Step 2
  - more collisions: longer backoff interval

# CSMA/CD efficiency

- $T_{prop}$  = max prop delay between 2 nodes in LAN
- $t_{trans}$  = time to transmit max-size frame

$$efficiency = \frac{1}{1 + 5t_{prop}/t_{trans}}$$

- efficiency goes to 1
  - as  $t_{prop}$  goes to 0
  - as  $t_{trans}$  goes to infinity
- better performance than ALOHA: and simple, cheap, decentralized!

# “Taking turns” MAC protocols

## channel partitioning MAC protocols:

- share channel *efficiently* and *fairly* at high load
- inefficient at low load: delay in channel access,  $1/N$  bandwidth allocated even if only 1 active node!

## random access MAC protocols

- efficient at low load: single node can fully utilize channel
- high load: collision overhead


## “taking turns” protocols

- look for best of both worlds!

# “Taking turns” MAC protocols

## polling:


- master node “invites” other nodes to transmit in turn
- typically used with “dumb” devices
- concerns:
  - polling overhead
  - latency
  - single point of failure (master)

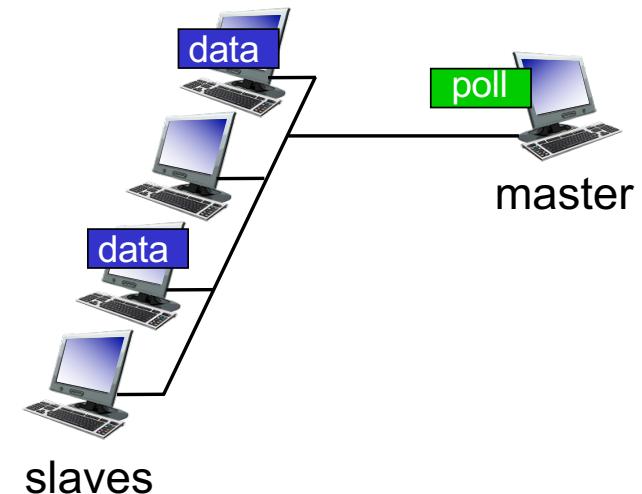


# “Taking turns” MAC protocols

## token passing:

- control *token* passed from one node to next sequentially.
- token message
- concerns:
  - token overhead
  - latency
  - single point of failure (token)

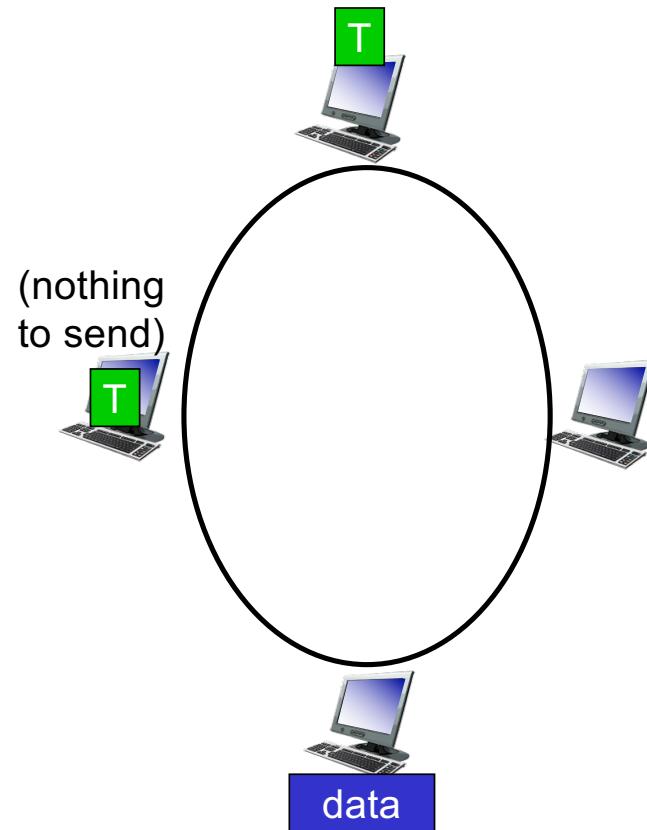


# Cable access network: FDM, TDM and random access!

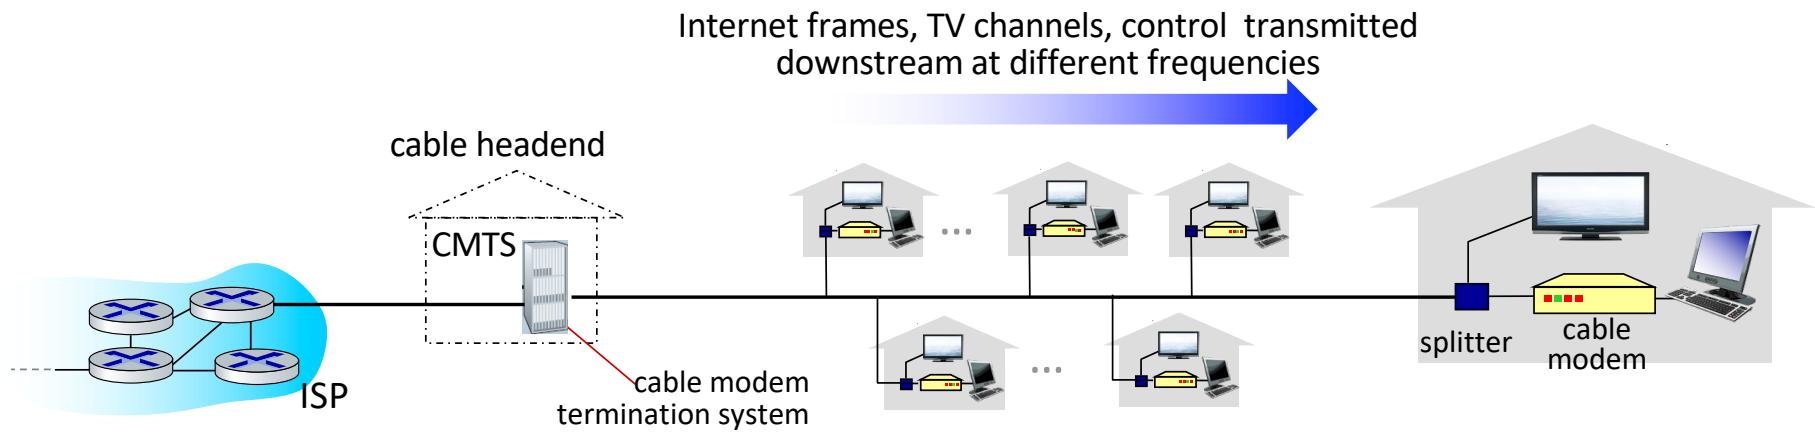

- **multiple** downstream (broadcast) FDM channels: up to 1.6 Gbps/channel
  - single CMTS transmits into channels
- **multiple** upstream channels (up to 1 Gbps/channel)
  - **multiple access:** all users contend (random access) for certain upstream channel time slots; others assigned TDM

# Cable access network:

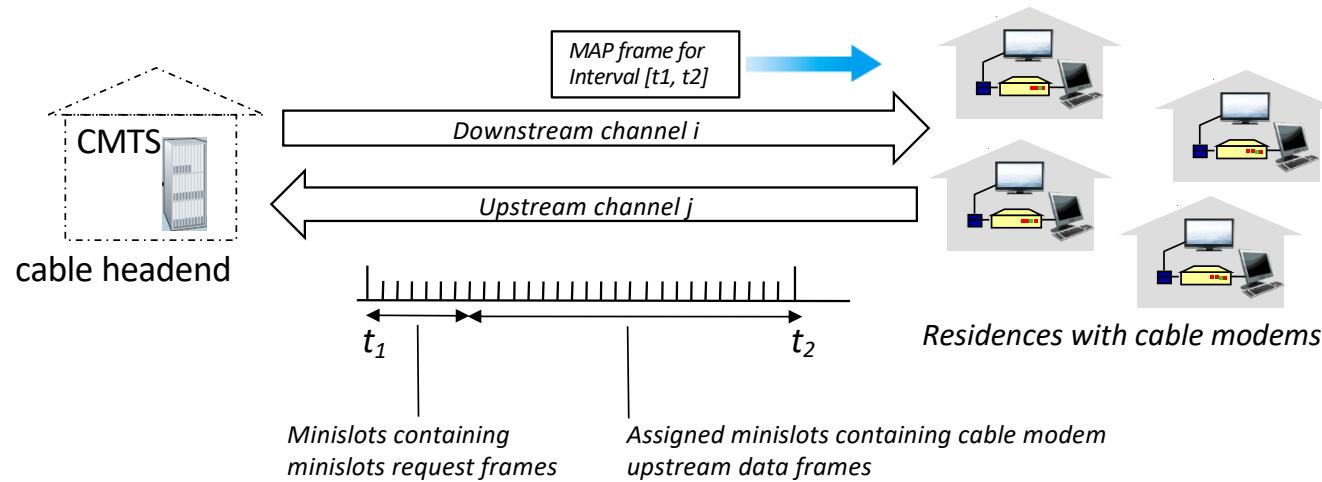

## DOCSIS: data over cable service interface specification

- FDM over upstream, downstream frequency channels
- TDM upstream: some slots assigned, some have contention
  - downstream MAP frame: assigns upstream slots
  - request for upstream slots (and data) transmitted random access (binary backoff) in selected slots

# Summary of MAC protocols

- **channel partitioning**, by time, frequency or code
  - Time Division, Frequency Division
- **random access** (dynamic),
  - ALOHA, S-ALOHA, CSMA, CSMA/CD
  - carrier sensing: easy in some technologies (wire), hard in others (wireless)
  - CSMA/CD used in Ethernet
  - CSMA/CA used in 802.11
- **taking turns**
  - polling from central site, token passing
  - Bluetooth, FDDI, token ring

# Link layer, LANs: roadmap

- introduction
  - error detection, correction
  - multiple access protocols
  - **LANs**
    - addressing, ARP
    - Ethernet
    - switches
    - VLANs
  - link virtualization: MPLS
  - data center networking
- 
- a day in the life of a web request

# MAC addresses


- 32-bit IP address:
  - *network-layer* address for interface
  - used for layer 3 (network layer) forwarding
  - e.g.: 128.119.40.136
- MAC (or LAN or physical or Ethernet) address:
  - function: used “locally” to get frame from one interface to another physically-connected interface (same subnet, in IP-addressing sense)
  - 48-bit MAC address (for most LANs) burned in NIC ROM, also sometimes software settable
  - e.g.: 1A-2F-BB-76-09-AD

*hexadecimal (base 16) notation  
(each “numeral” represents 4 bits)*

# MAC addresses

each interface on LAN

- has unique 48-bit **MAC** address
- has a locally unique 32-bit IP address (as we've seen)

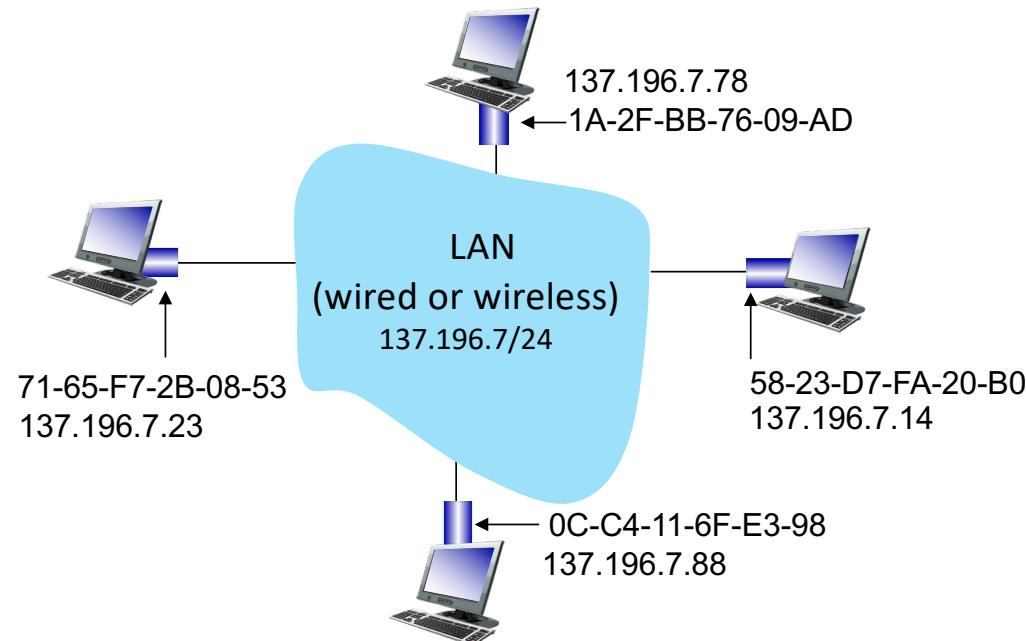


# MAC addresses

- MAC address allocation administered by IEEE
- manufacturer buys portion of MAC address space (to assure uniqueness)
- analogy:
  - MAC address: like Social Security Number
  - IP address: like postal address
- MAC flat address: portability
  - can move interface from one LAN to another
  - recall IP address *not* portable: depends on IP subnet to which node is attached

# ARP: address resolution protocol

*Question:* how to determine interface's MAC address, knowing its IP address?

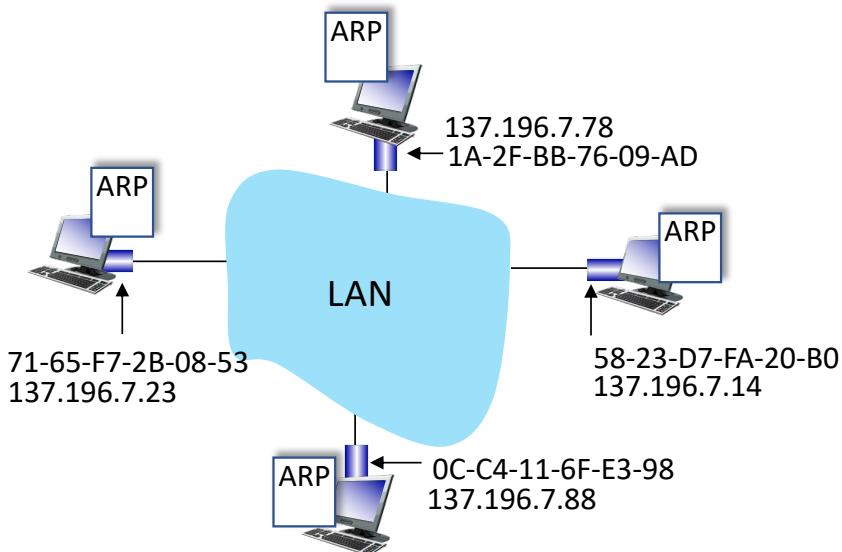


**ARP table:** each IP node (host, router) on LAN has table

- IP/MAC address mappings for some LAN nodes:  
<IP address; MAC address; TTL>
- TTL (Time To Live): time after which address mapping will be forgotten (typically 20 min)

# ARP protocol in action

example: A wants to send datagram to B


- B's MAC address not in A's ARP table, so A uses ARP to find B's MAC address

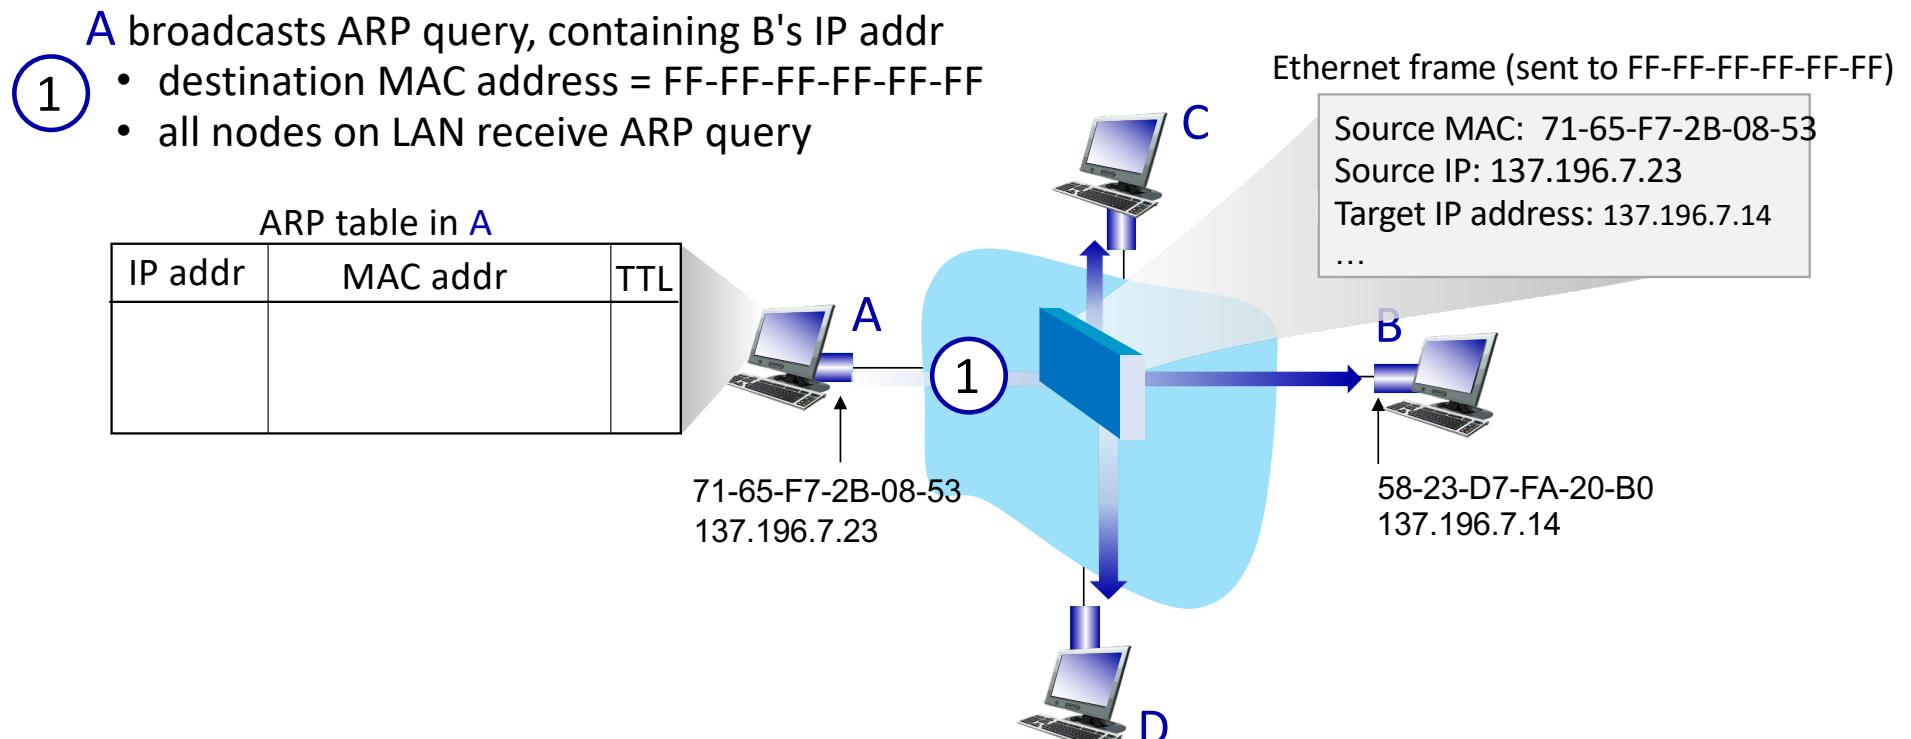

# ARP protocol in action

example: A wants to send datagram to B


- B's MAC address not in A's ARP table, so A uses ARP to find B's MAC address

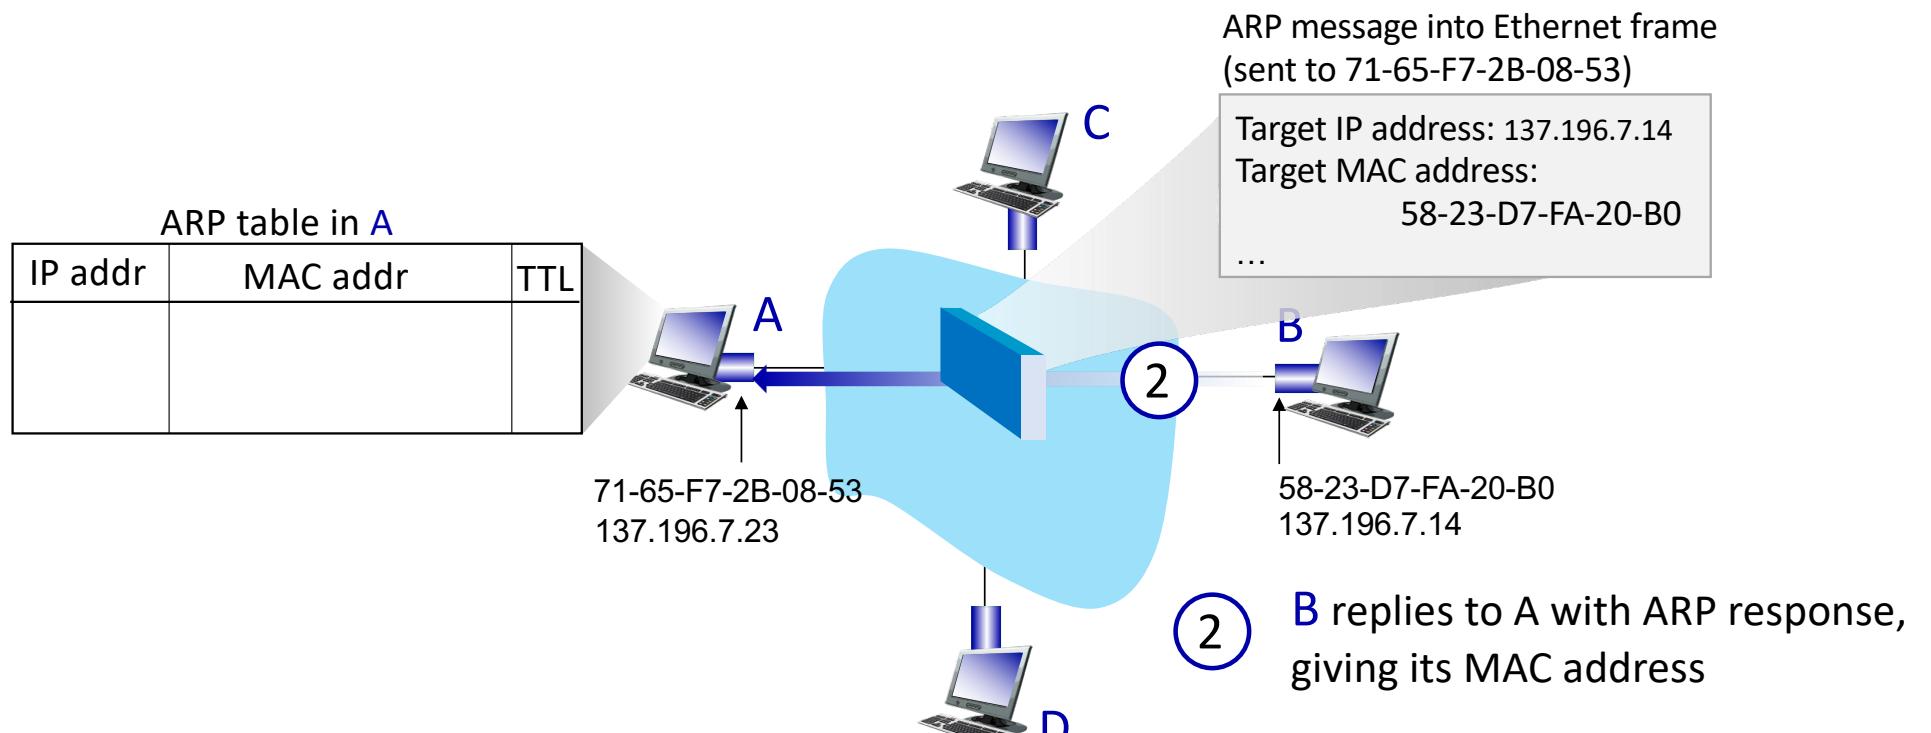

# ARP protocol in action

example: A wants to send datagram to B


- B's MAC address not in A's ARP table, so A uses ARP to find B's MAC address

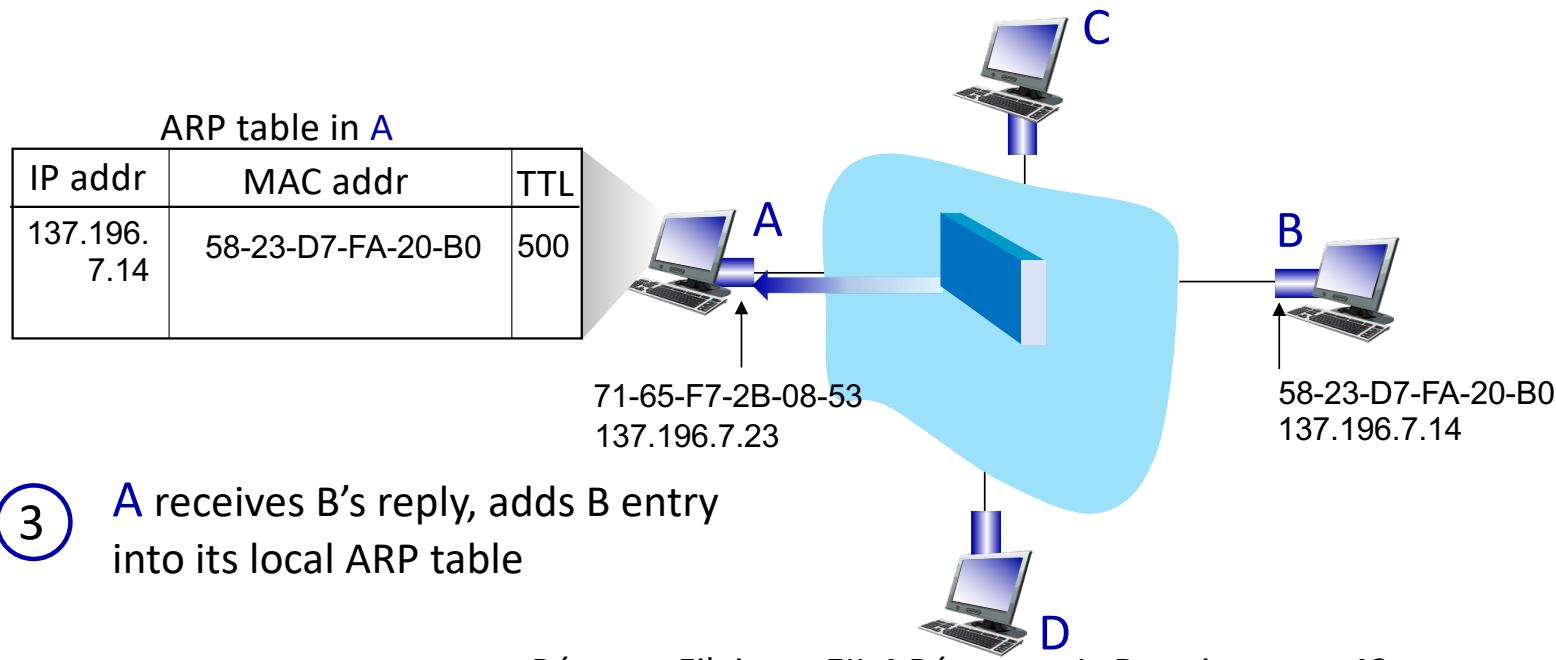

# Routing to another subnet: addressing


walkthrough: sending a datagram from *A* to *B* via *R*

- focus on addressing – at IP (datagram) and MAC layer (frame) levels
- assume that:
  - A knows B's IP address
  - A knows IP address of first hop router, R (how?)
  - A knows R's MAC address (how?)

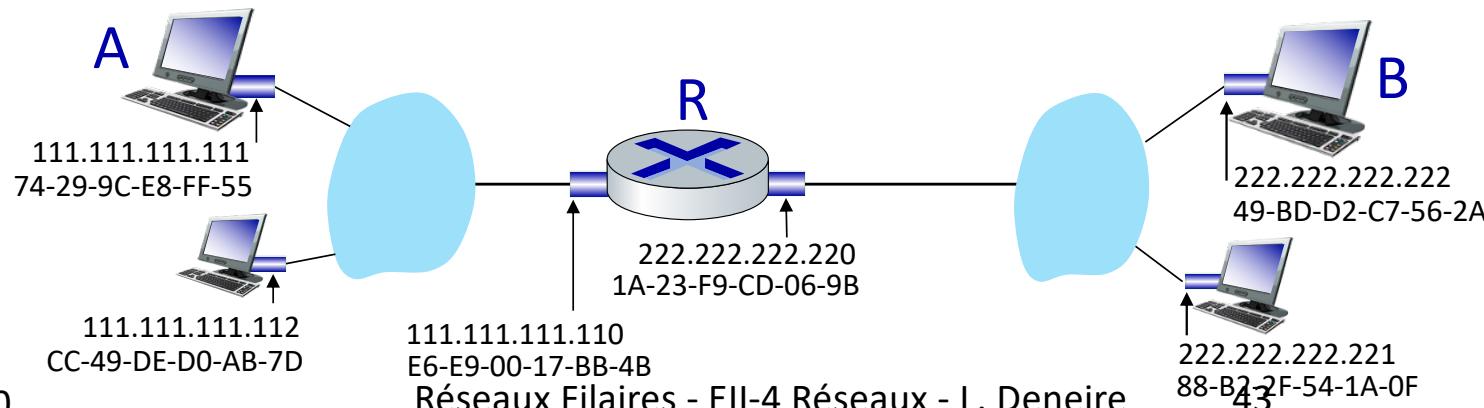


# Routing to another subnet: addressing

- A creates IP datagram with IP source A, destination B
- A creates link-layer frame containing A-to-B IP datagram
  - R's MAC address is frame's destination

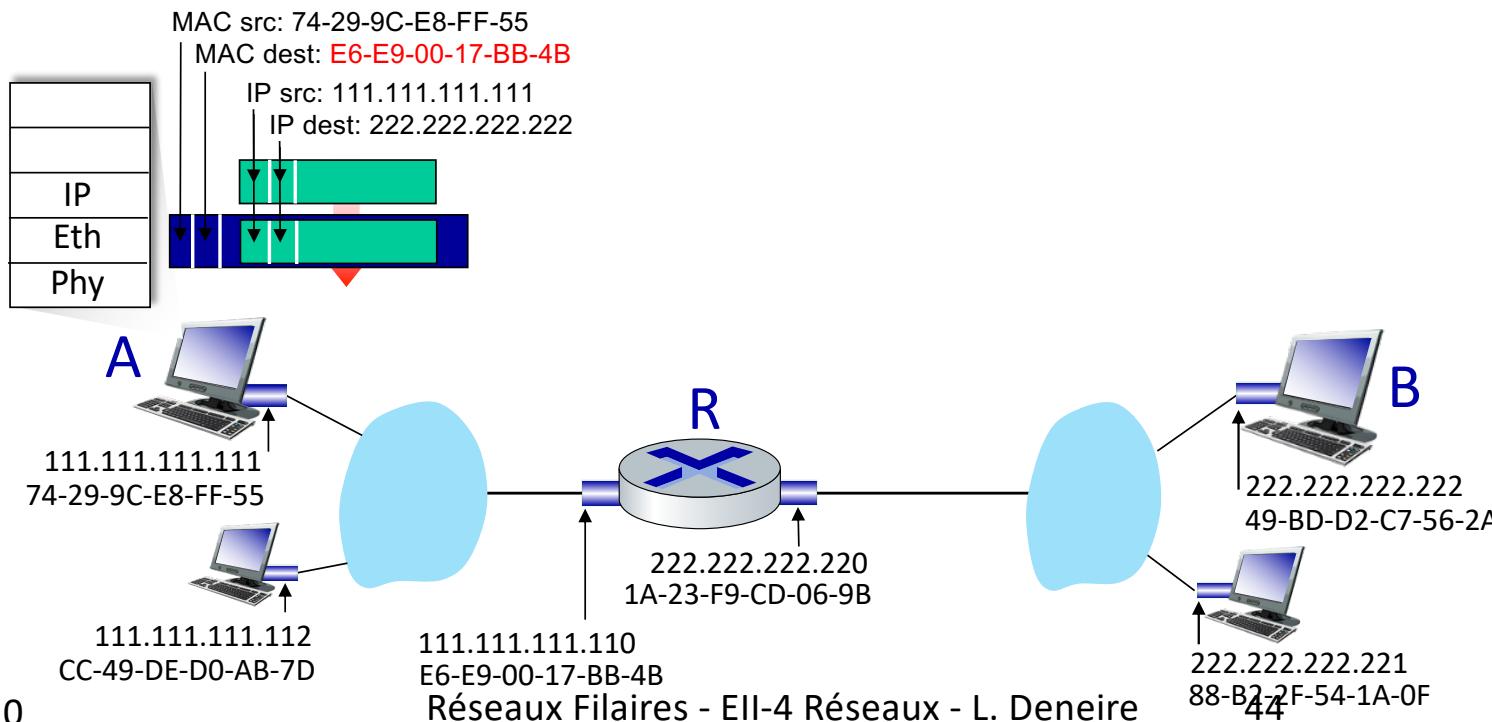


# Routing to another subnet: addressing

- frame sent from A to R
- frame received at R, datagram removed, passed up to IP

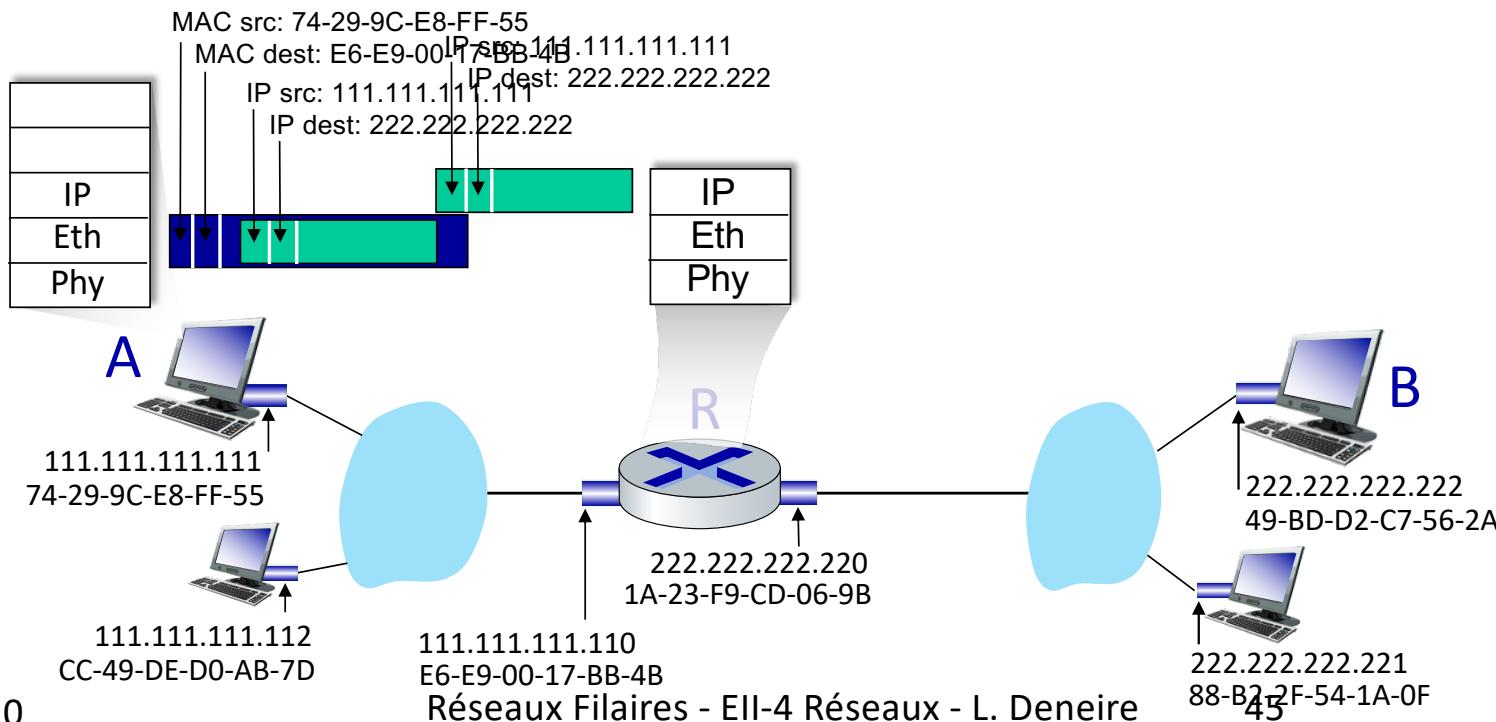


# Routing to another subnet: addressing

- R determines outgoing interface, passes datagram with IP source A, destination B to link layer
- R creates link-layer frame containing A-to-B IP datagram. Frame destination address: B's MAC address

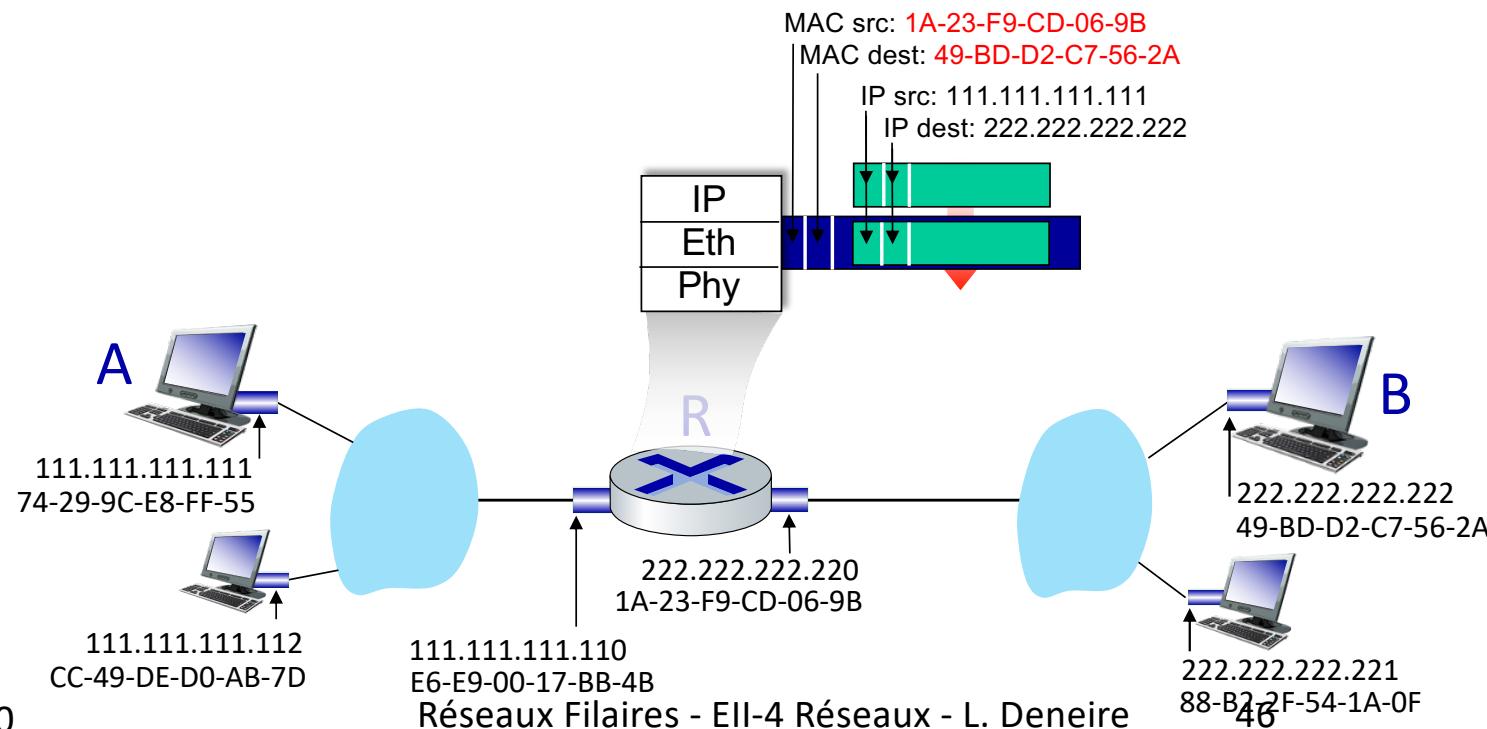


# Routing to another subnet: addressing

- R determines outgoing interface, passes datagram with IP source A, destination B to link layer
- R creates link-layer frame containing A-to-B IP datagram. Frame destination address: B's MAC address
- transmits link-layer frame

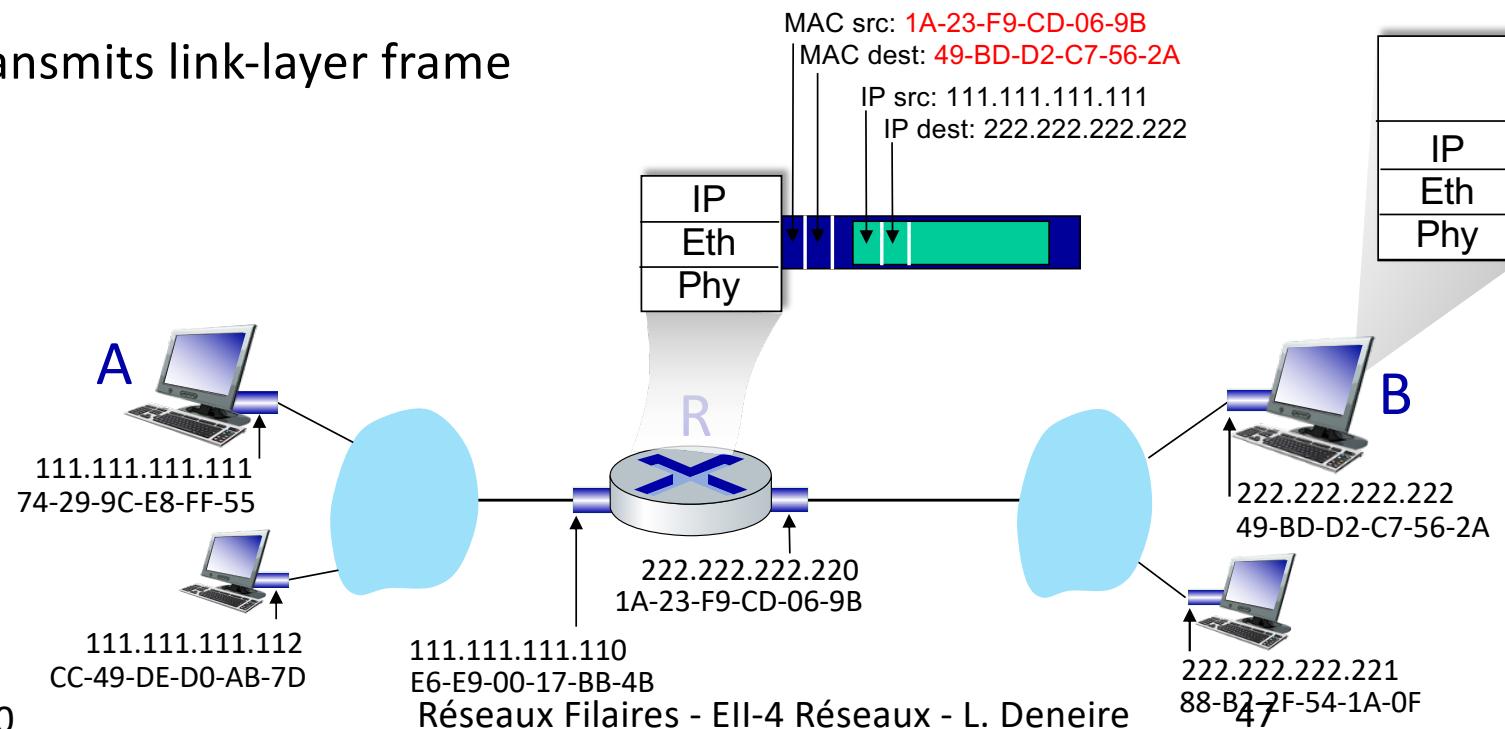

# Routing to another subnet: addressing

- B receives frame, extracts IP datagram destination B
- B passes datagram up protocol stack to IP

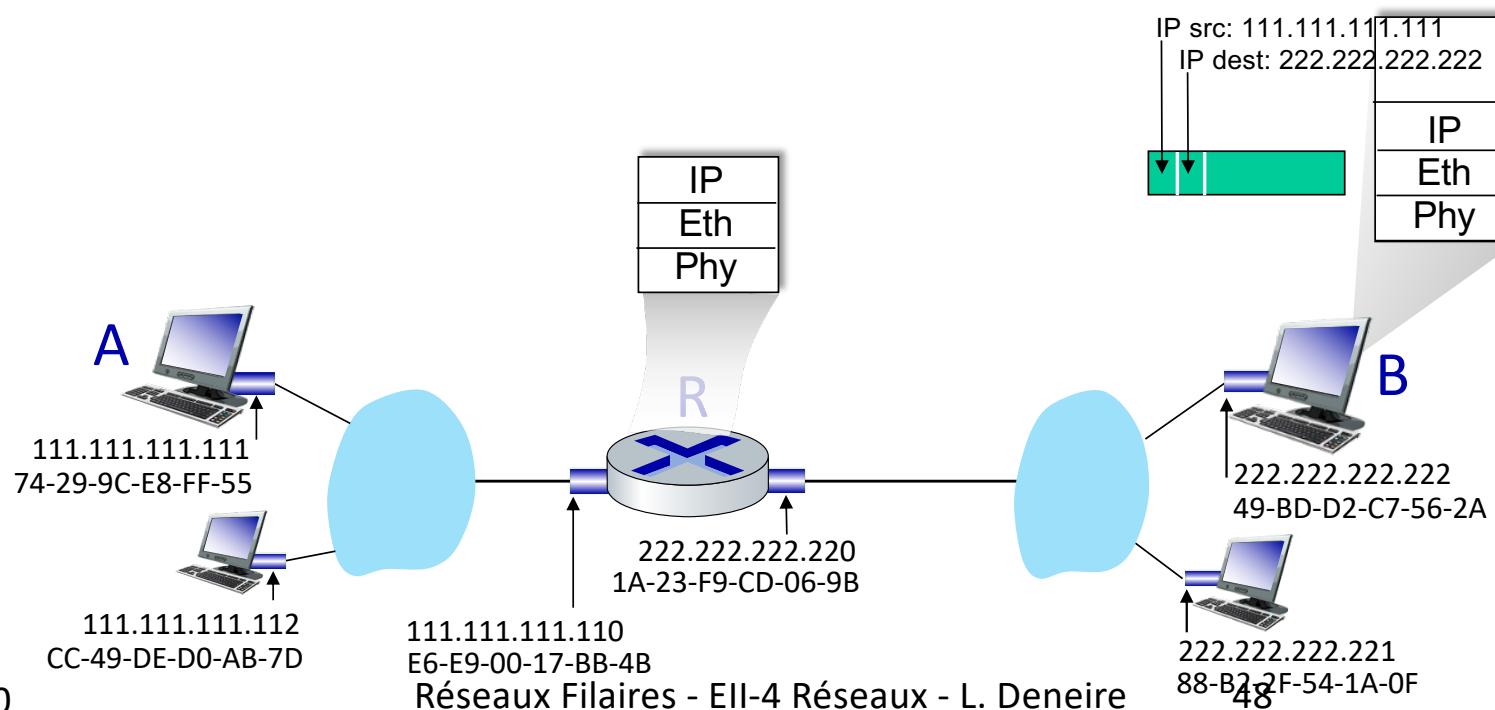


# Link layer, LANs: roadmap

- introduction
  - error detection, correction
  - multiple access protocols
  - **LANs**
    - addressing, ARP
    - **Ethernet**
    - switches
    - VLANs
  - link virtualization: MPLS
  - data center networking
- 
- a day in the life of a web request

# Ethernet

“dominant” wired LAN technology:

- first widely used LAN technology
- simpler, cheap
- kept up with speed race: 10 Mbps – 400 Gbps
- single chip, multiple speeds (e.g., Broadcom BCM5761)

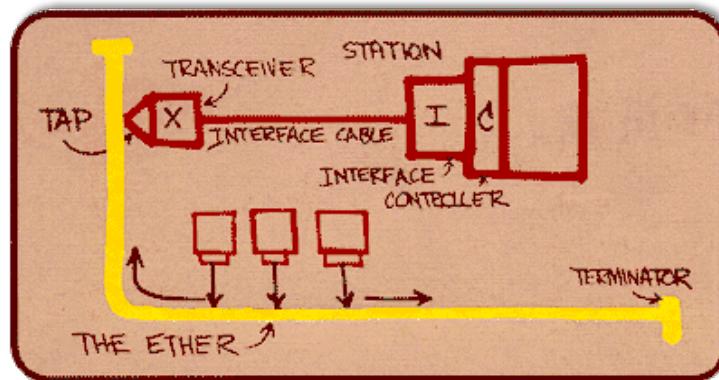

*Metcalfe's Ethernet sketch*

<https://www.uspto.gov/learning-and-resources/journeys-innovation/audio-stories/defying-doubters>

# Ethernet: physical topology

- **bus:** popular through mid 90s
  - all nodes in same collision domain (can collide with each other)
- **switched:** prevails today
  - active link-layer 2 *switch* in center
  - each “spoke” runs a (separate) Ethernet protocol (nodes do not collide with each other)



# Ethernet frame structure


sending interface encapsulates IP datagram (or other network layer protocol packet) in **Ethernet frame**



*preamble:*

- used to synchronize receiver, sender clock rates
- 7 bytes of 10101010 followed by one byte of 10101011

# Ethernet frame structure (more)

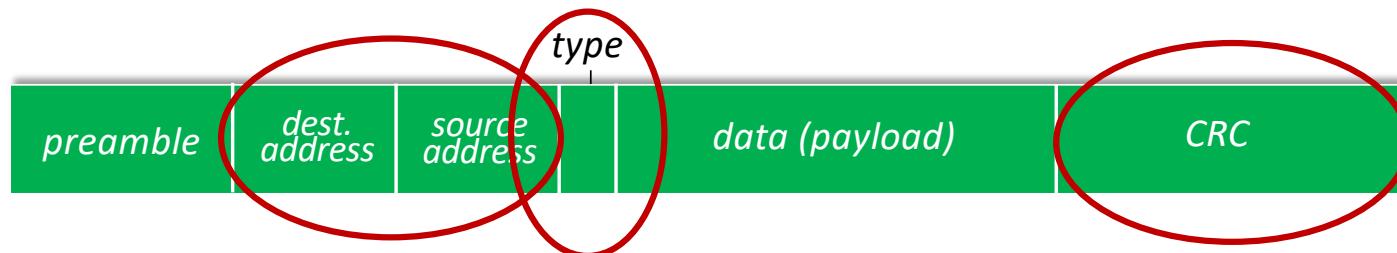


- **addresses:** 6 byte source, destination MAC addresses
  - if adapter receives frame with matching destination address, or with broadcast address (e.g., ARP packet), it passes data in frame to network layer protocol
  - otherwise, adapter discards frame
- **type:** indicates higher layer protocol
  - mostly IP but others possible, e.g., Novell IPX, AppleTalk
  - used to demultiplex up at receiver
- **CRC:** cyclic redundancy check at receiver
  - error detected: frame is dropped

# Ethernet: unreliable, connectionless

- **connectionless**: no handshaking between sending and receiving NICs
- **unreliable**: receiving NIC doesn't send ACKs or NAKs to sending NIC
  - data in dropped frames recovered only if initial sender uses higher layer rdt (e.g., TCP), otherwise dropped data lost
- Ethernet's MAC protocol: unslotted **CSMA/CD with binary backoff**

# 802.3 Ethernet standards: link & physical layers

- *many* different Ethernet standards
  - common MAC protocol and frame format
  - different speeds: 2 Mbps, 10 Mbps, 100 Mbps, 1Gbps, 10 Gbps, 40 Gbps
  - different physical layer media: fiber, cable

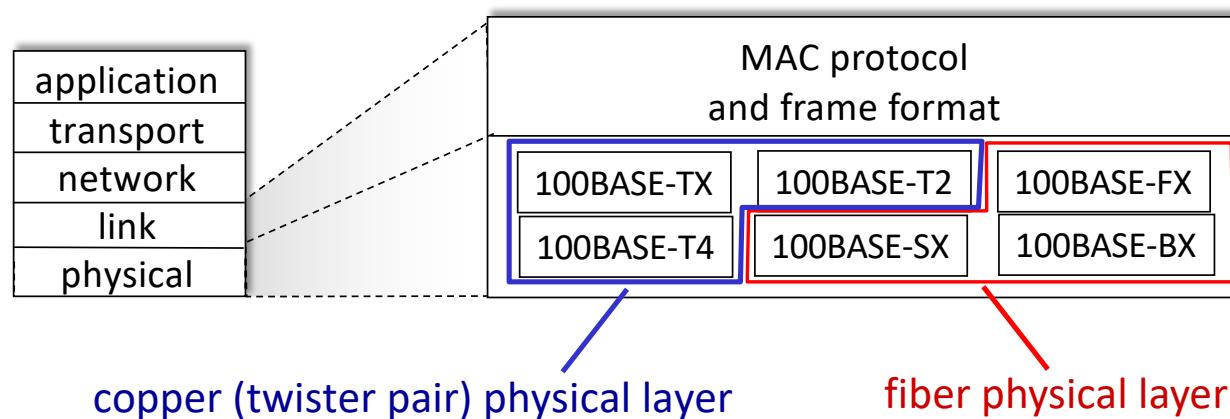

# Link layer, LANs: roadmap


- introduction
  - error detection, correction
  - multiple access protocols
  - **LANs**
    - addressing, ARP
    - Ethernet
    - **switches**
    - **VLANs**
  - link virtualization: MPLS
  - data center networking
- 
- a day in the life of a web request

# Ethernet switch

- Switch is a **link-layer** device: takes an *active* role
  - store, forward Ethernet frames
  - examine incoming frame's MAC address, *selectively* forward frame to one-or-more outgoing links when frame is to be forwarded on segment, uses CSMA/CD to access segment
- **transparent**: hosts *unaware* of presence of switches
- **plug-and-play, self-learning**
  - switches do not need to be configured


# Switch: multiple simultaneous transmissions

- hosts have dedicated, direct connection to switch
- switches buffer packets
- Ethernet protocol used on *each* incoming link, so:
  - no collisions; full duplex
  - each link is its own collision domain
- switching:** A-to-A' and B-to-B' can transmit simultaneously, without collisions

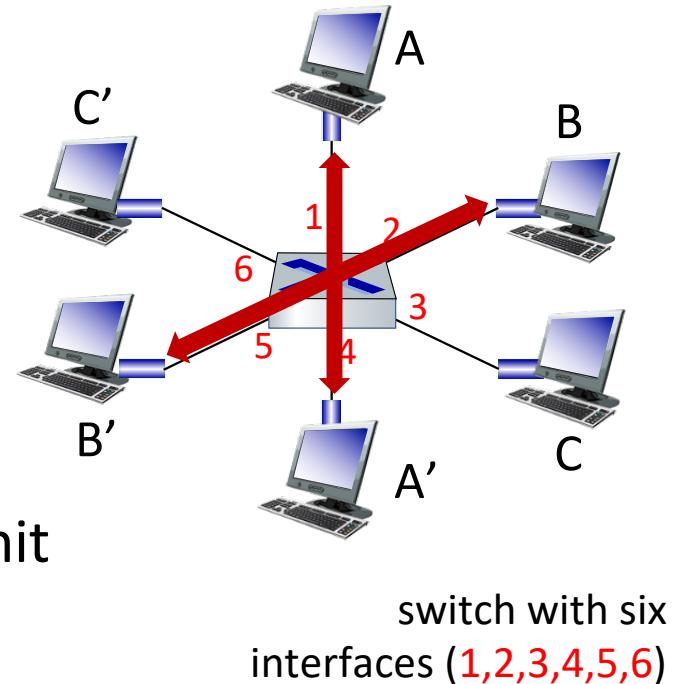

# Switch: multiple simultaneous transmissions

- hosts have dedicated, direct connection to switch
- switches buffer packets
- Ethernet protocol used on *each* incoming link, so:
  - no collisions; full duplex
  - each link is its own collision domain
- **switching:** A-to-A' and B-to-B' can transmit simultaneously, without collisions
  - but A-to-A' and C to A' can *not* happen simultaneously

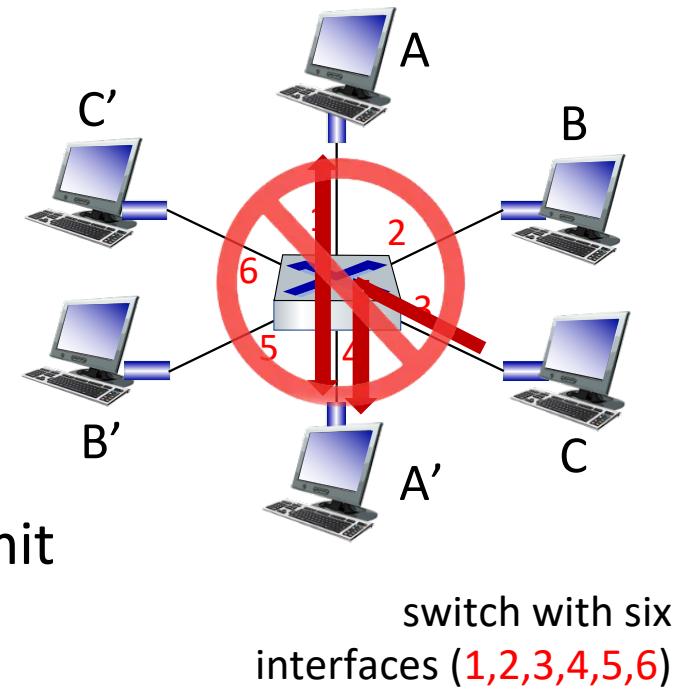

# Switch forwarding table


**Q:** how does switch know A' reachable via interface 4, B' reachable via interface 5?

**A:** each switch has a **switch table**, each entry:

- (MAC address of host, interface to reach host, time stamp)
- looks like a routing table!


**Q:** how are entries created, maintained in switch table?

- something like a routing protocol?

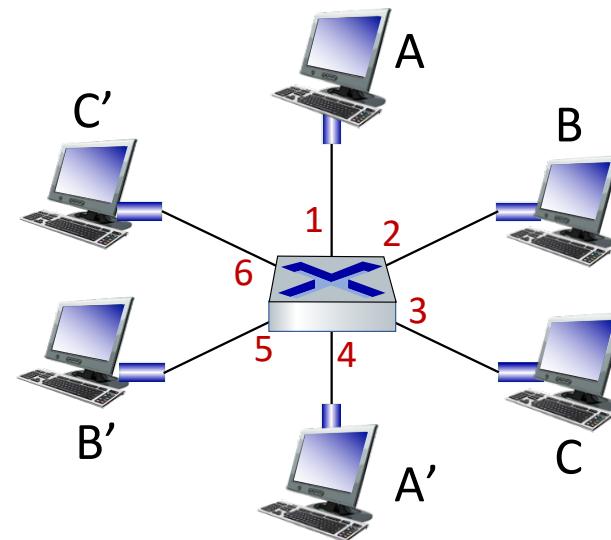

# Switch: self-learning

- switch *learns* which hosts can be reached through which interfaces
  - when frame received, switch “learns” location of sender: incoming LAN segment
  - records sender/location pair in switch table

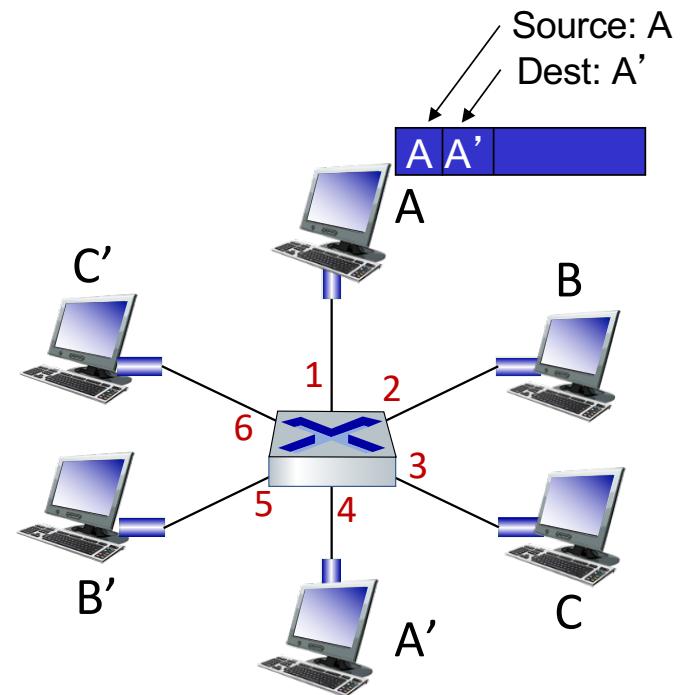

MAC addr	interface	TTL
A	1	60

*Switch table  
(initially empty)*


# Switch: frame filtering/forwarding

when frame received at switch:

1. record incoming link, MAC address of sending host
2. index switch table using MAC destination address
3. if entry found for destination
  - then {
    - if destination on segment from which frame arrived
      - then drop frame
      - else forward frame on interface indicated by entry
  - }
  - else flood /\* forward on all interfaces except arriving interface \*/

# Self-learning, forwarding: example

- frame destination, A', location unknown: **flood**
- destination A location known: **selectively send** on just one link

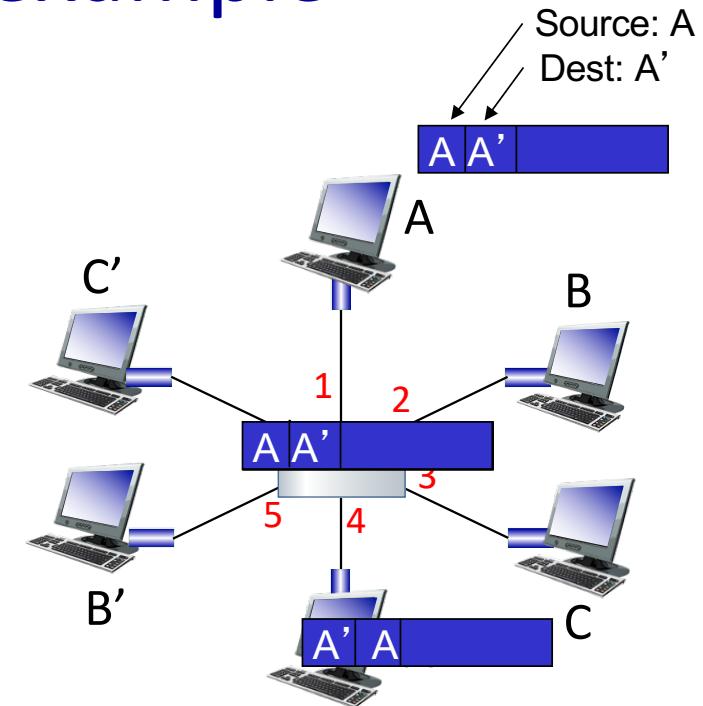


MAC addr	interface	TTL
A	1	60
A'	4	60

*switch table  
(initially empty)*

# Interconnecting switches

self-learning switches can be connected together:

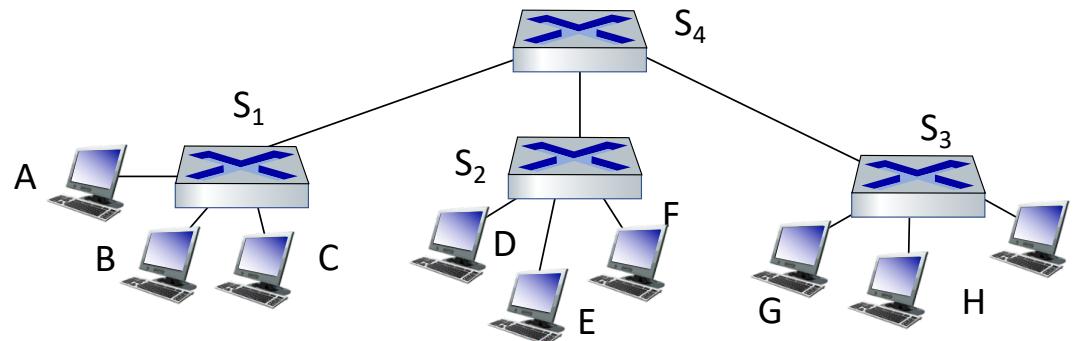


**Q:** sending from A to G - how does  $S_1$  know to forward frame destined to G via  $S_4$  and  $S_3$ ?

- **A:** self learning! (works exactly the same as in single-switch case!)


# Self-learning multi-switch example

Suppose C sends frame to I, I responds to C

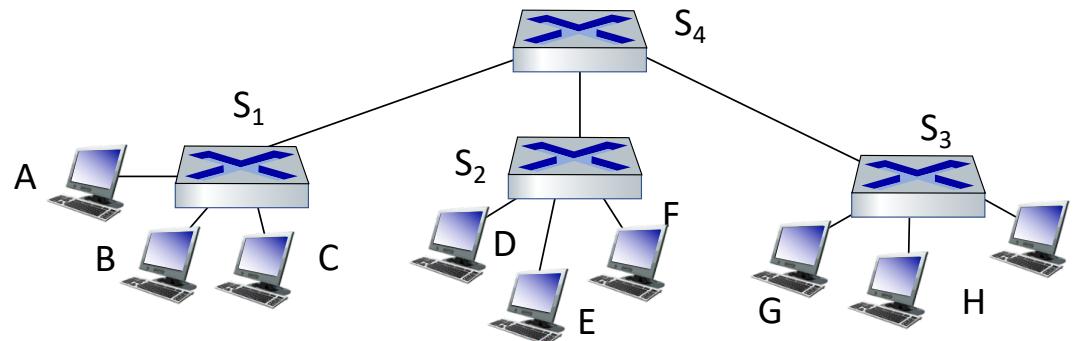

**Q:** show switch tables and packet forwarding in  $S_1, S_2, S_3, S_4$

# Small institutional network

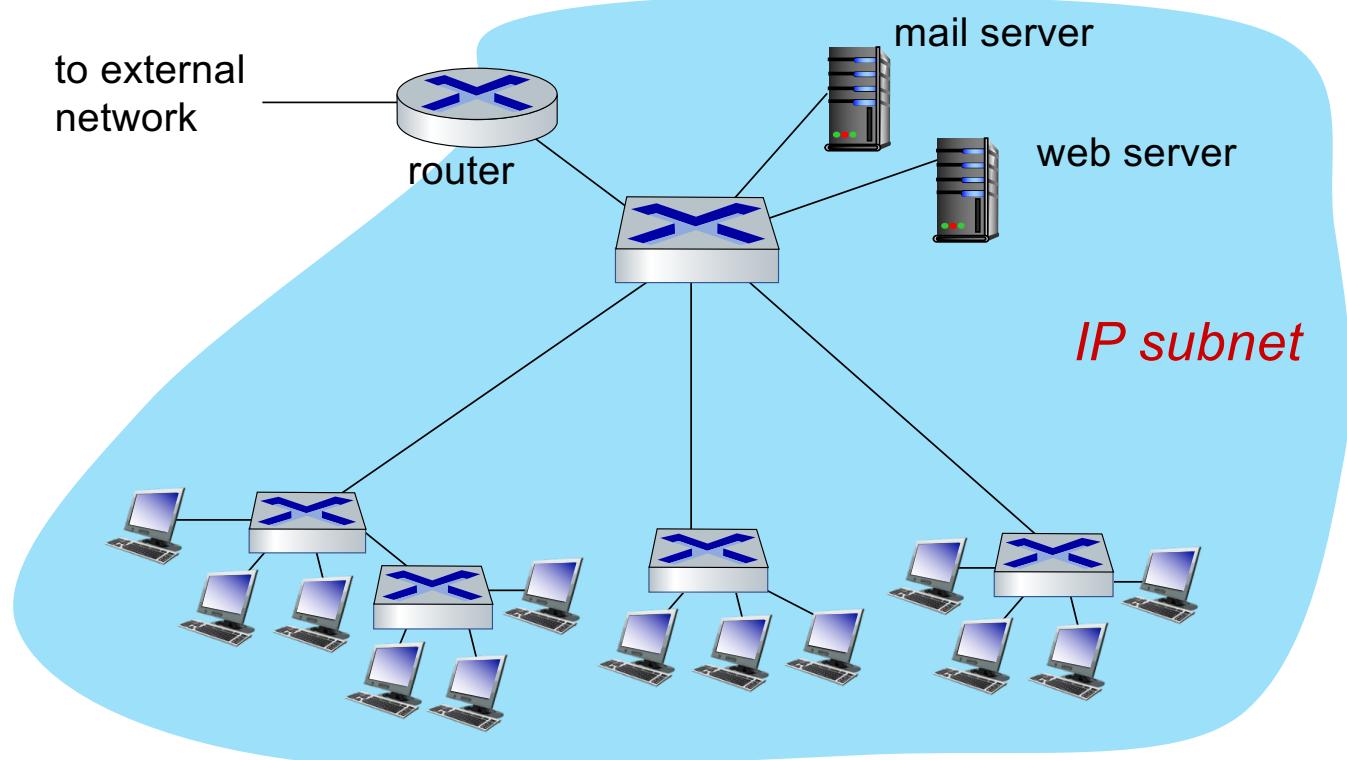


# Switches vs. routers

both are store-and-forward:

- *routers*: network-layer devices (examine network-layer headers)
- *switches*: link-layer devices (examine link-layer headers)

both have forwarding tables:

- *routers*: compute tables using routing algorithms, IP addresses
- *switches*: learn forwarding table using flooding, learning, MAC addresses

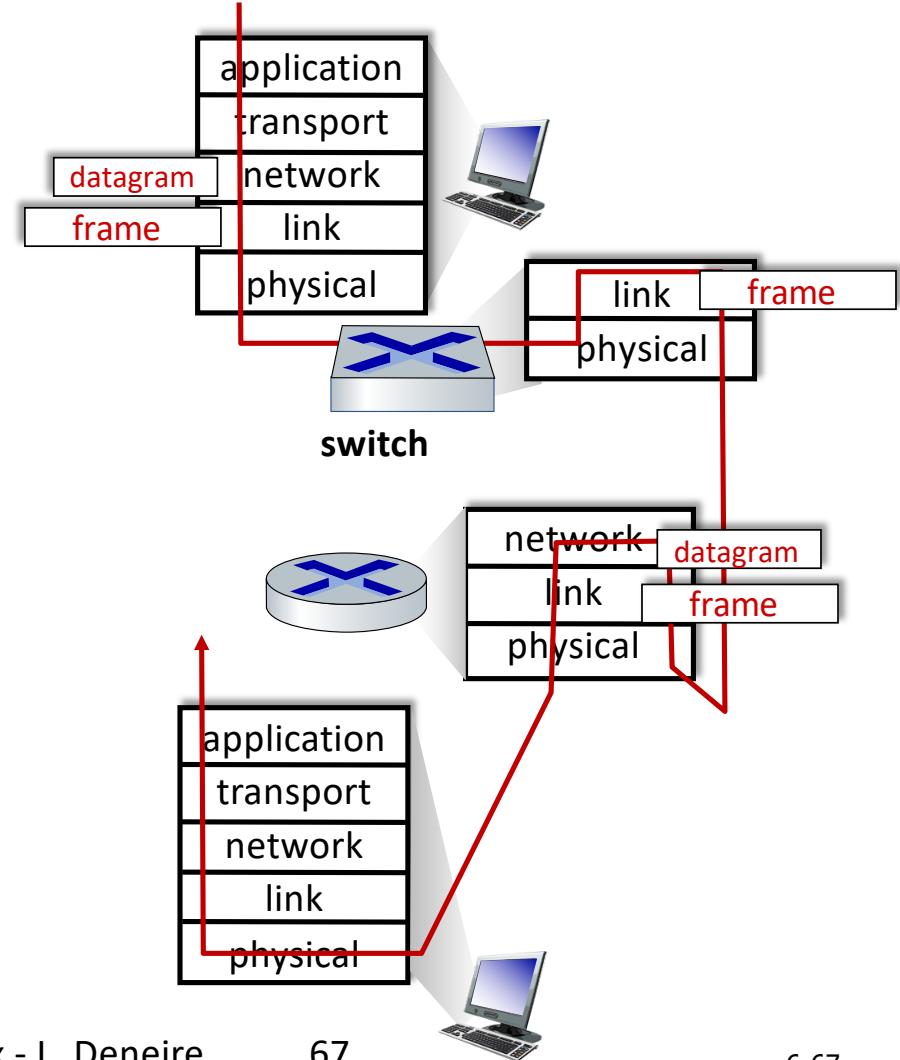


# Link layer, LANs: roadmap

- introduction
  - error detection, correction
  - multiple access protocols
  - **LANs**
    - addressing, ARP
    - Ethernet
    - switches
    - **VLANs**
  - link virtualization: MPLS
  - data center networking
- 
- a day in the life of a web request

# Virtual LANs (VLANs): motivation

*Q:* what happens as LAN sizes scale, users change point of attachment?

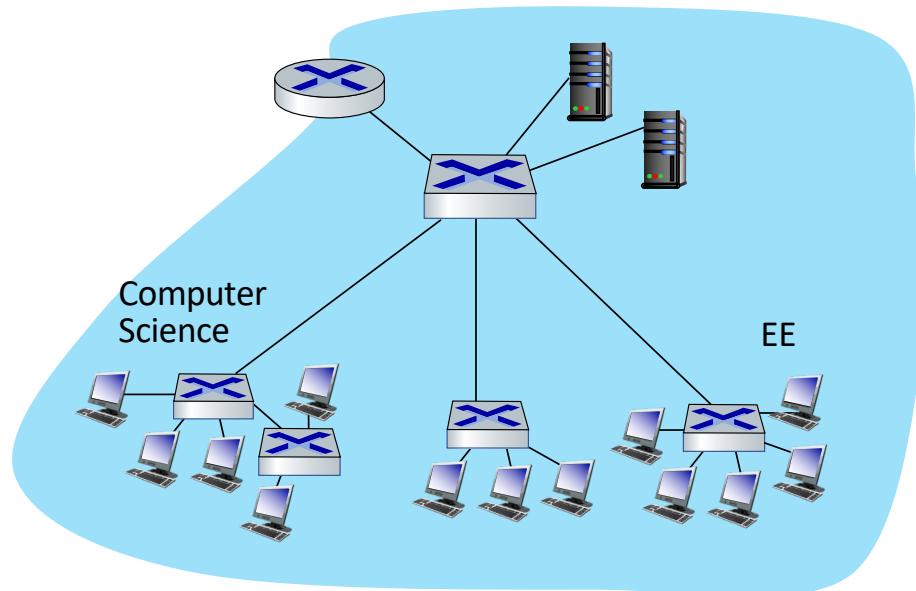


single broadcast domain:

- *scaling:* all layer-2 broadcast traffic (ARP, DHCP, unknown MAC) must cross entire LAN
- efficiency, security, privacy issues

# Virtual LANs (VLANs): motivation

*Q:* what happens as LAN sizes scale, users change point of attachment?

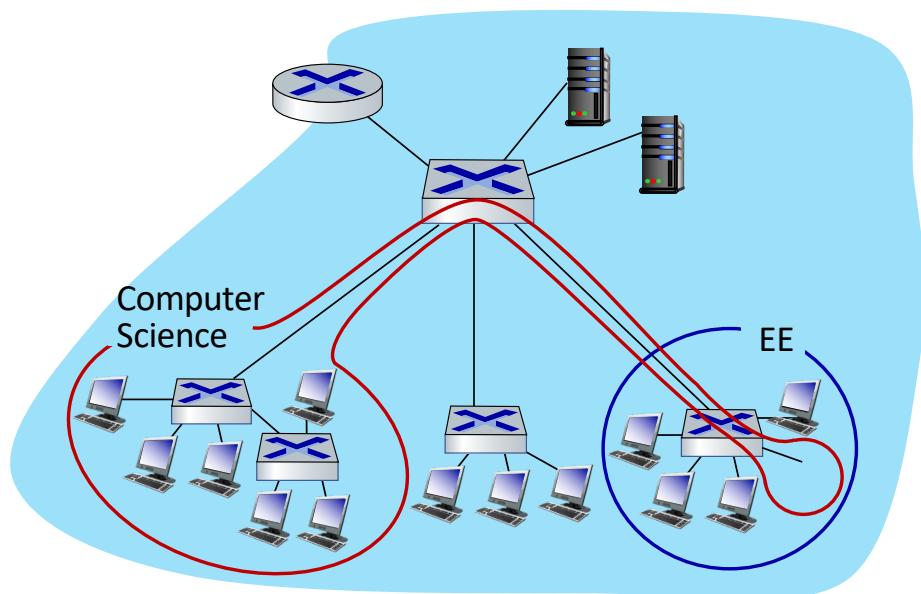

single broadcast domain:

- *scaling:* all layer-2 broadcast traffic (ARP, DHCP, unknown MAC) must cross entire LAN
- efficiency, security, privacy, efficiency issues

administrative issues:


- CS user moves office to EE - *physically* attached to EE switch, but wants to remain *logically* attached to CS switch

# Port-based VLANs


## Virtual Local Area Network (VLAN)

switch(es) supporting VLAN capabilities can be configured to define multiple *virtual* LANS over single physical LAN infrastructure.

**port-based VLAN:** switch ports grouped (by switch management software) so that *single* physical switch .....

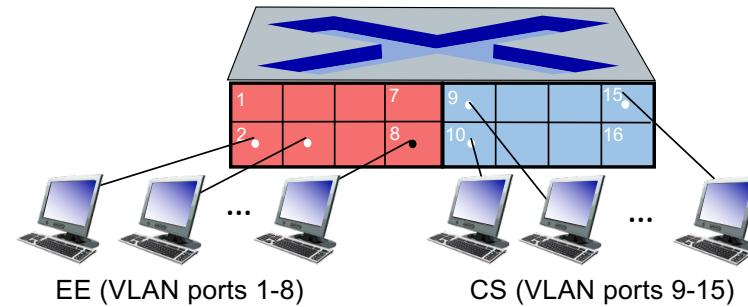


... operates as **multiple** virtual switches

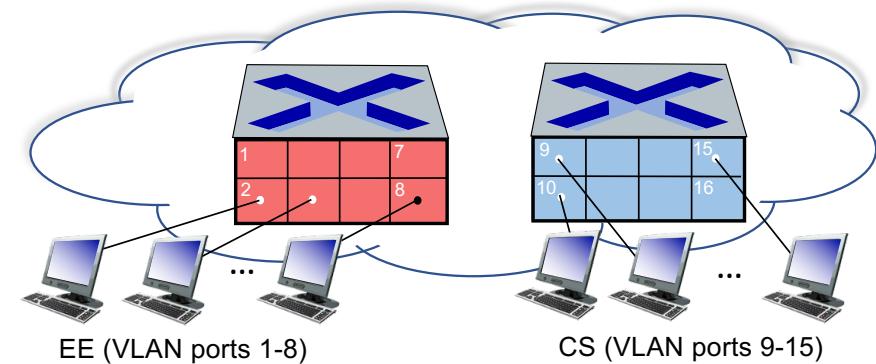


# Port-based VLANs

- **traffic isolation:** frames to/from ports 1-8 can *only* reach ports 1-8
  - can also define VLAN based on MAC addresses of endpoints, rather than switch port
- **dynamic membership:** ports can be dynamically assigned among VLANs
- **forwarding between VLANs:** done via routing (just as with separate switches)
  - in practice vendors sell combined switches plus routers

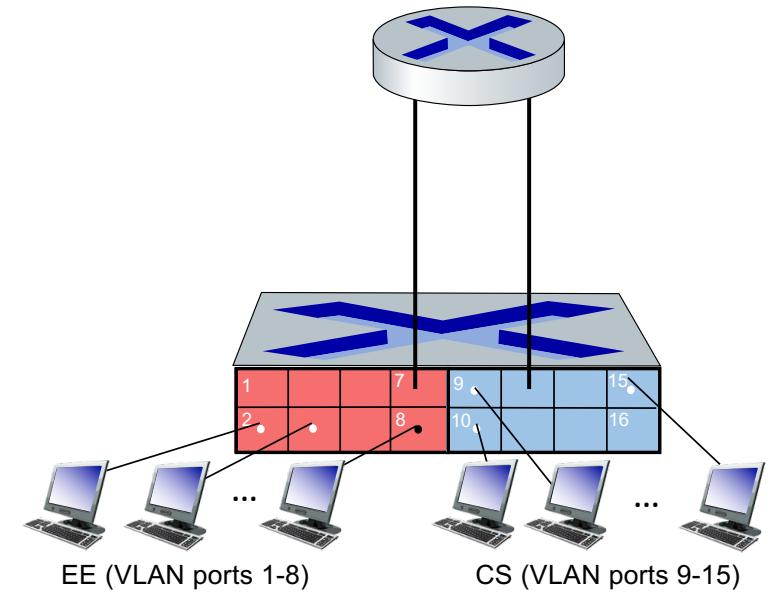

# VLANS spanning multiple switches

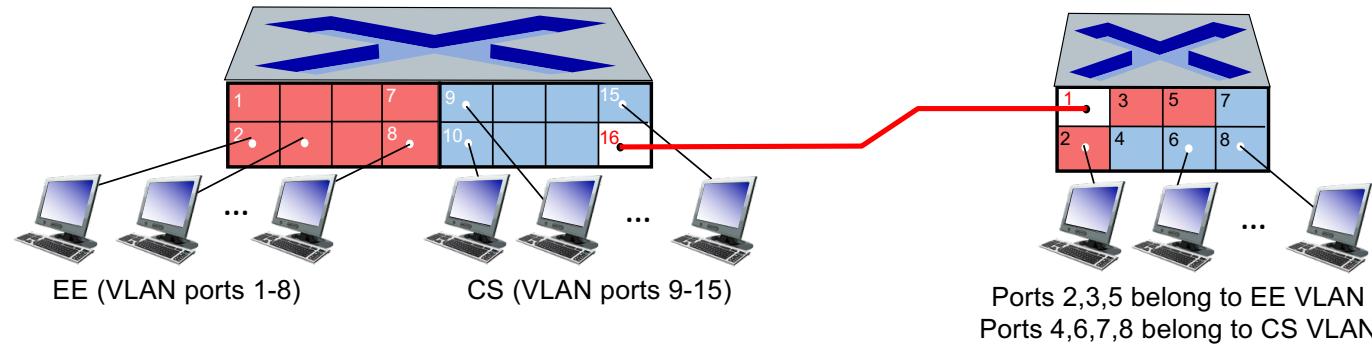

**trunk port:** carries frames between VLANs defined over multiple physical switches

- frames forwarded within VLAN between switches can't be vanilla 802.1 frames (must carry VLAN ID info)
- 802.1q protocol adds/removed additional header fields for frames forwarded between trunk ports

# 802.1Q VLAN frame format

